


# RMS-300

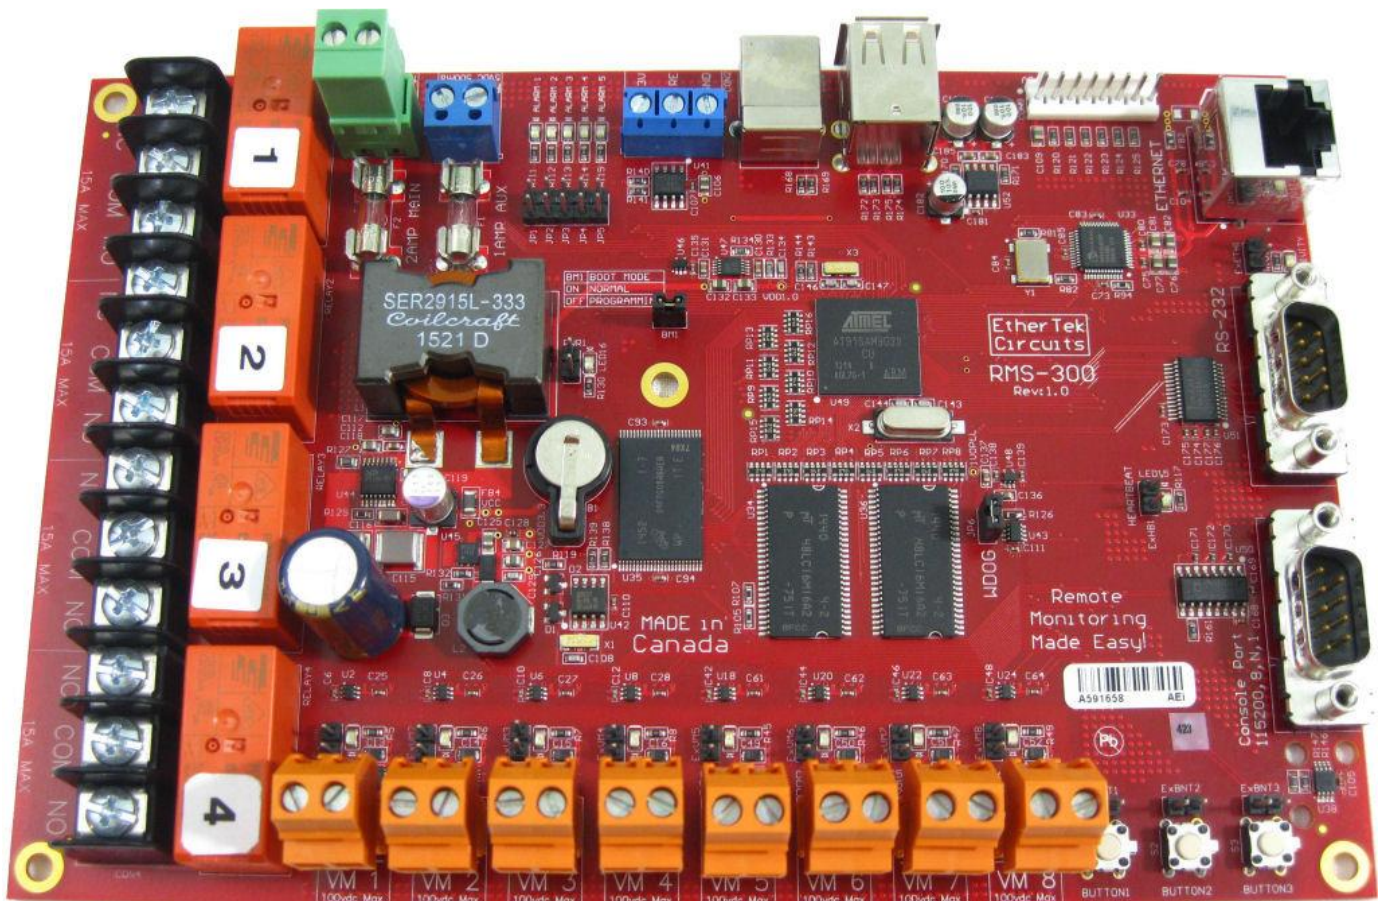

(C) EtherTek Circuits

# Owners Manual

REMOTE MONITORING MADE EASY!

# **RMS-300 Owners Manual (Rev 1a)**

Oct 15, 2016

---

© EtherTek Circuits  
473 Corina Ave • Unit 38  
Princeton, B.C. Canada  
V0X 1W0 • Phone 250.295.6794 • 250-868-0448

---

## Table of Contents

Introduction .....	1
Possible Applications .....	1
A/C or Battery Powered Microwave, Telephony, Network Equipment .....	1
Features.....	2
Configuration.....	4
Setting up RMS-300 .....	4
RMS-300 is powered up, Now What ? .....	5
Installation.....	7
Basic installation example 1.....	7
Basic installation example 2.....	9
Basic installation example 3.....	10
Basic installation example 4.....	11
The Relays.....	12
Need More Relays? .....	16
The Voltmeters.....	19
Voltmeter Triggers Explained.....	23
Volts on the Command Line .....	23
Voltmeter Graphs.....	24
How to measure amperage by using a shunt.....	24
Need More Voltmeters? .....	29
The Temperature .....	33
The I/O Pins and Push Buttons .....	35
GPIO.....	37
ALARMS .....	37
PUSH BUTTONS.....	38
USB Support .....	39
CAMERAS .....	39
USB to SERIAL.....	39
USB WIRELESS .....	39
GENERAL USB SUPPORT .....	39
Firmware Upgrades.....	40
Web Based Upgrade.....	40
FTP Based Upgrade .....	42
Downloads .....	45
Specs.....	45
Base System 4Mb Flash / 16 Mb Ram.....	45
General Board Information.....	45
Block Diagram .....	46
Graphs .....	47
Warranty .....	48

## Introduction

RMS-300 Is a unique remote monitoring, data acquisition, and control device specifically designed for use with Battery powered wireless internet repeater sites, or other AC & DC powered remote equipment

RMS-300 Has ultra low power consumption and won't put a drain on your power source. Uses 1.2 Watts.

RMS-300 Is powered by DC voltage from 10 to 60 volts.

RMS-300 Uses embedded Ethernet technology for internet data acquisition and remote voltage monitoring.

RMS-300 Uses the LINUX operating system for versatility, stability, and security.

RMS-300 Gives you the situational awareness you need to keep your equipment operational and reliable.

## Possible Applications

### **A/C or Battery Powered Microwave, Telephony, Network Equipment**

Use RMS-300 to monitor battery levels, room temperature, signal strength (RSSI) on radios and more. RMS-300 has 6 onboard isolated voltmeters giving it the ability to measure DC voltage from -100 to +100 volts with 24 bit accuracy. RMS-300 also has 3 power relays giving it the unique ability to turn on/off devices remotely using an Internet connection. Use the power relays to remote start a generator. RMS-300 has 5 dedicated input pins used for door alarms or to monitor motion sensors. RMS-300 has a full featured serial port, control modems, cell phones, gsm modules, and other devices that use serial communication. RMS-300 has two USB 2.0 ports that supports several USB devices concurrently using a USB hub. Control USB cameras, store data on USB flash drives, control USB speakers etc. RMS-300 has input and output pins used to control your own custom devices. RMS-300 can alert you via email or SMS messages when your battery bank is low. RMS-300 has ping monitor software that allows you to monitor network devices and alert you to failure and possibly power cycle the device. Monitor all this information remotely over an Internet connection using an ordinary web browser. RMS-300 gives you direct hardware control of fans, lights, computers, cameras, modems, radios, etc... No more guessing what your battery levels are. No more wondering if your signal strengths are at an acceptable level. No more long drives to reset a fussy radio. Let RMS-300 do this all remotely via the Internet.

## Features

- Four layer PCB with Nickel Immersion Gold plating and red solder mask.
- 400 - MHz Arm Processor (500 Mips !).
- 256 - megs of Nand Flash. Create and store custom applications.
- 64 - megs of SD-Ram.
- Low Noise Switching Power Supplies accepts 8 - 60 vdc input. Can be powered directly from 12, 24, or 48 volt battery banks.
- Battery backed-up, real time clock.
- One onboard temperature sensor  $-25^{\circ}\text{C}$   $+100^{\circ}\text{C}$ .
- Eight 24 bit isolated voltmeters ( $\pm 100$  VDC). Each voltmeter has its own 24 bit Delta Sigma ADC.
- Four Latching Relays for devices using 1 – 240v - 16 amps AC/DC current.
- Three programmable push buttons.
- Six general purpose I/O pins.
- Power output port, 5.0vdc (500ma).
- Power output port, 3.3vdc (500ma).
- One full serial port for controlling cell phones, modems, etc.
- One console serial port.
- 1-Wire interface for external temperature sensors.
- Two USB 2.0 ports for cameras, wireless clients, extra Ethernet, etc.
- Runs real Linux! 2.6.33 kernel.
- Send SMS messages, Email alerts, SNMP traps, Remote Syslog Messages.
- Ping watchdog, power cycle equipment after a set amount of ping timeouts.
- Command line utilities: ping, ftp, email, relays, etc.
- Flash new firmware over the internet.
- Dual Watchdog Reset circuits, processor integrated, and extra hardware.
- Control RMS-300 via web page, telnet, ssh, or snmp.
- Full SNMP v1, v2, v3 support (default v3).

#### **REMOTE MONITORING MADE EASY!**

- Supports external USB relays and voltmeters.
- Hardware is user accessible from files on the board.
- Make your own utilities and scripts to upload. (Bash, PHP, Python, Lua)
- Pluggable connectors for ease of use.

#### **A partial list of programs and packages included:**

SQLite v3 database, Telnet ,Drop Bear SSH, Light Http and Https Server, Pro FTP, Cron scheduling agent, Busy Box, PPP, Net SNMP, NanoCom, Easy Edit, Nano, and Vi, Fping, SMTP email client, IPtables, Lrz and Lsz, Open SSL, Modbus Library, RRD Tool, USB Web Camera Support.

#### **A programmers dream:**

RMS-300 comes with PHP, Perl, Python, and Lua. Make your own custom monitoring programs and upload them to the RMS-300 board, or create your own branded interface!

## Configuration

### Setting up RMS-300

Connect 8 - 60 volts dc power (minimum 500 ma) to the green terminal block (See figure 1). Connect an Ethernet cable to the rj-45 jack on the **RMS-300** board. It takes the **RMS-300** board approximately 30 seconds to bring up the Linux operating system. The **RMS-300** will signal it is ready by first blinking the green status light in a continuous heartbeat sequence. After a few seconds the red alarm leds will display a light sequence. The board is now fully booted up and is ready for configuration.

**Note1:** **RMS-300** units should be mounted inside a steel enclosure that is grounded properly to prevent Electro Magnetic Interference.

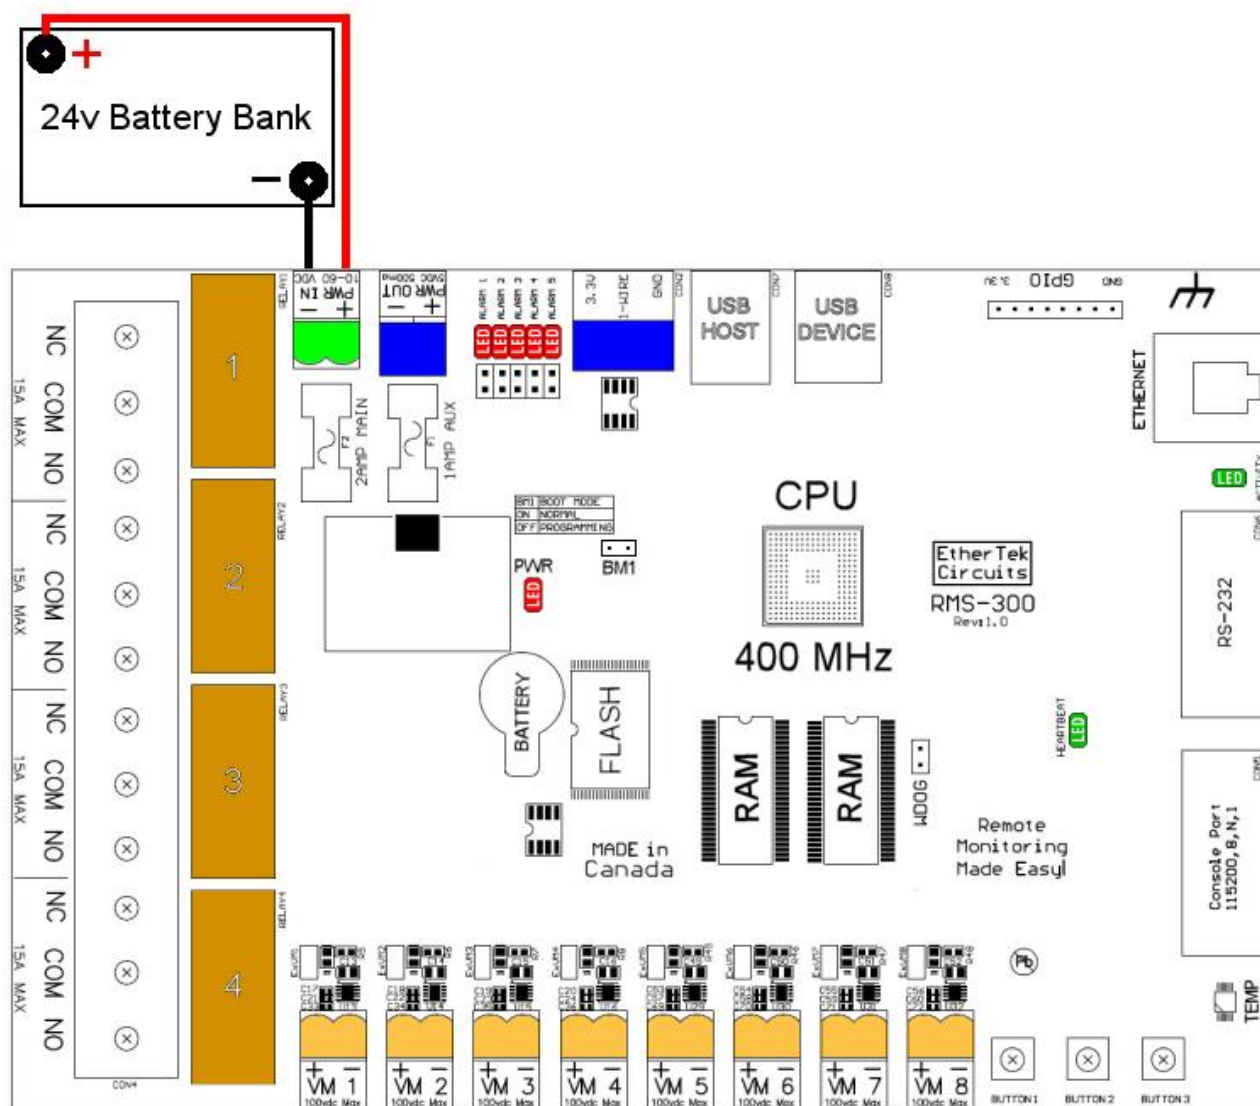


FIGURE 1



## REMOTE MONITORING MADE EASY!

### RMS-300 is powered up, Now What ?

We recommend configuring RMS-300 before deploying it in the field. Simply plug RMS-300 into your network or computer using an Ethernet cable (Straight or Cross).

When RMS-300 is turned on it boots the Linux operating system and uses the values stored in its configuration files to bring up the system. The default values consist of an IP address, username, and password. The default IP address is 10.10.10.10. The default username is **root**. The default password is **pass**.



Note: You may at anytime restore the RMS-300 device to factory default values by pressing and holding down the micro push button #1 located near the console port and then turning the RMS-300 device on by inserting the **green** power plug. Release the button when the alarm leds start to flash. When the alarm leds stop flashing, the RMS-300 unit will be ready to configure.

Give your computer an ip address in the 10.10.10.X class. For instance use 10.10.10.1. Set your computers Netmask to 255.255.255.0 There is no need to set a Gateway at this time. Open your favorite web browser and enter 10.10.10.10 into the address bar, press enter or the go button. You should be presented with a password box like the one below.

## REMOTE MONITORING MADE EASY!

### Connect to 10.10.10.10

The server 10.10.10.10 at root requires a username and password.

User name:

Password:

☐ Remember my password

OK Cancel

Enter in the default username and password then press the OK button. You will be taken to the RMS-300 Home page. This page contains an overview of all of the functionality of the RMS-300 board.

## RMS-300

- HOME
- IOS
- RELAYS
- TEMPERATURE
- VOLTMETERS
- GRAPHS
- WEB CAMERA
- SETUP
- HELP

Welcome to RMS-300! The home page gives you a quick overview of system statistics, alarms, gpios, relays, and voltmeters.

Kernel Build Date: Jul-21-2016

Root FS Build: 191

## Remote Monitoring Made Easy!

### RMS-300 System @ 10.10.10.10

Station: RMS-300	Temp: 23.0 C 73.0 F	Memory: <div></div>
Location: EtherTek Dev Lab	Mac: 00:50:C2:53:80:03	Disk: <div></div>
Date: Oct-12-2016	Time: 12:08:15 AM	Uptime: 0.01 Days
CPU: 400 MHz	OS: Linux	RMSD: OK

#### Alarm Overview

Multi-Purpose Alarm Inputs (3.3 volts max)

Alarm 1 Not Named ARMED	Alarm 2 Not Named TRIGGERED	Alarm 3 Not Named TRIGGERED	Alarm 4 Not Named TRIGGERED	Alarm 5 Not Named TRIGGERED
-------------------------------	-----------------------------------	-----------------------------------	-----------------------------------	-----------------------------------

#### I/O Overview

User Defined I/O Pins (3.3 volts max)

GPIO 1 Not Named LOW	GPIO 2 Not Named LOW	GPIO 3 Not Named LOW	GPIO 4 Not Named LOW	GPIO 5 Not Named LOW	GPIO 6 Not Named LOW
----------------------------	----------------------------	----------------------------	----------------------------	----------------------------	----------------------------

#### Relay Overview

Multi-Purpose Power Relays


RELAY 1 Not Named COM-NC	RELAY 2 Not Named COM-NC	RELAY 3 Not Named COM-NC	RELAY 4 Not Named COM-NC
--------------------------------	--------------------------------	--------------------------------	--------------------------------

#### Voltmeter Overview

Voltmeter#	Range	Units	Value	Gauge	Name	Adjust	Precision
Voltmeter 1	+/- 100	VDC	0.0001	<div></div>	Not Named	1.0000	4
Voltmeter 2	+/- 100	VDC	-0.0001	<div></div>	Not Named	1.0000	4
Voltmeter 3	+/- 100	VDC	-0.000	<div></div>	Not Named	1.0000	3
Voltmeter 4	+/- 100	VDC	-0.000	<div></div>	Not Named	1.0000	3
Voltmeter 5	+/- 100	VDC	0.000	<div></div>	Not Named	1.0000	3
Voltmeter 6	+/- 100	VDC	0.000	<div></div>	Not Named	1.0000	3
Voltmeter 7	+/- 100	VDC	0.000	<div></div>	Not Named	1.0000	3
Voltmeter 8	+/- 100	VDC	-0.000	<div></div>	Not Named	1.0000	3

## REMOTE MONITORING MADE EASY!

In the left side panel, click on the Setup icon. This takes you to the System Setup area shown below.

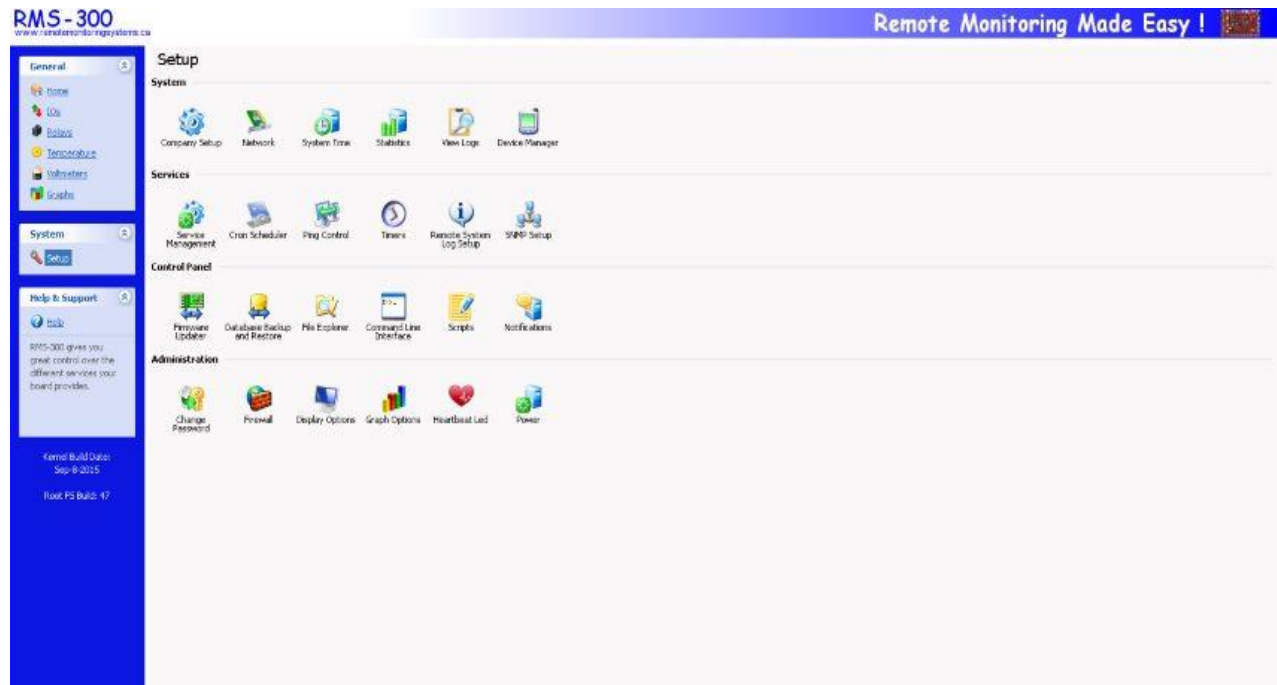

Here you will want to visit the following areas: General Setup , Network , System Time , and Change Password. Adjust the Station Name, Location, Domain Name, IP Address, Subnet Mask, Gateway, DNS, and password you want the **RMS-300** device to have. Caution must be taken when configuring the device, entering incorrect values may cause you to lose connectivity with the device, forcing the need for a factory reset. Once you have RMS-300 configured properly, it is ready to deploy in the field. Below are some basic examples of how to install the RMS-300 unit.

## Installation

### **Basic installation example 1**

#### Monitoring your Battery Bank

To monitor your main battery power supply, run a wire from the positive side of the battery bank to one of the Voltmeter positive inputs. Run a second wire from the negative side of the battery bank to the corresponding Voltmeter negative input as shown in Figure 2. Connect **RMS-300** to the internet with a common Ethernet cable and monitor the voltage level of your battery bank with a web browser.

REMOTE MONITORING MADE EASY!

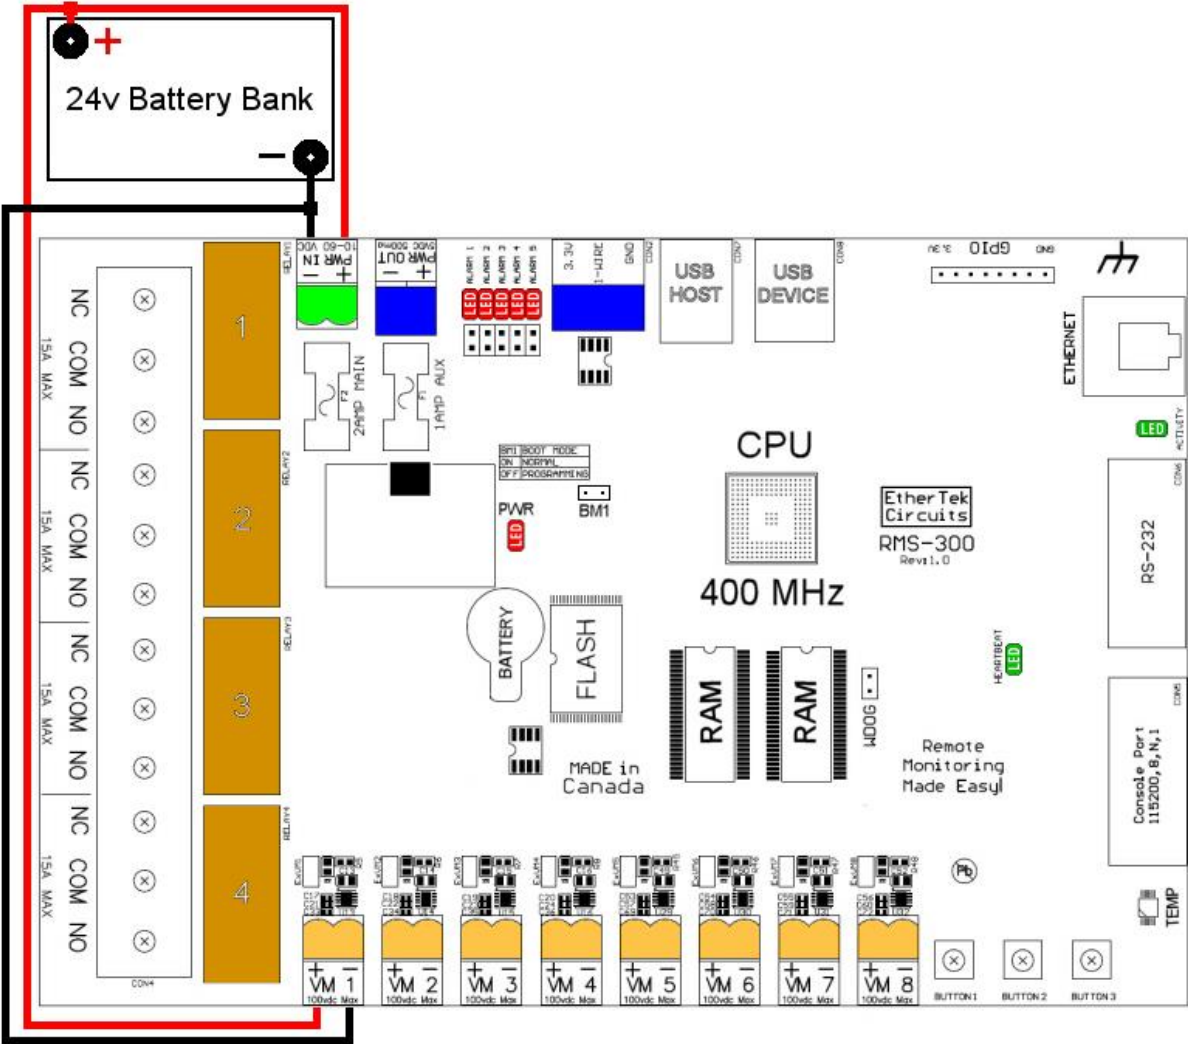


FIGURE 2

## REMOTE MONITORING MADE EASY!

### Basic installation example 2

#### [Signal strength on Link CX Radios](#)

Radios that have an external RSSI port for checking signal strength can be monitored with ease. Simply attach the RSSI output from the radio to one of the Voltmeter inputs on the RMS-300 board (see Figure 3). Monitor the signal strength of your radios with a web browser and/or have RMS-300 alert you by email if the signal falls below a certain threshold.

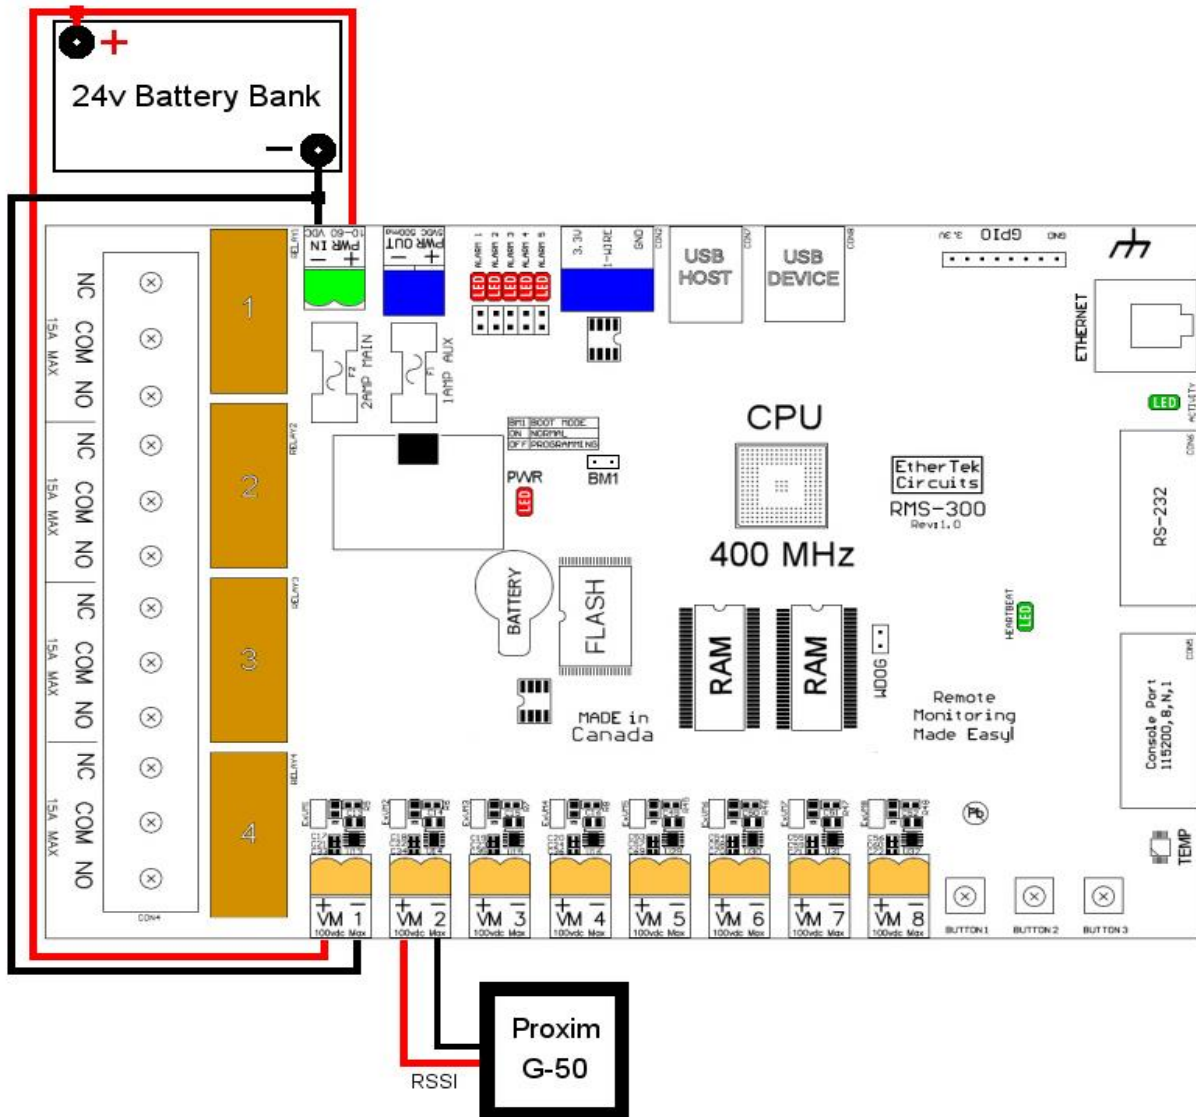


FIGURE 3

### Basic installation example 3

#### Turning Devices ON/OFF

To make any device remotely reset able, simply cut one of the wires in the power cord of a device. Attach one side of the cut wire to the COM terminal on one of the Power Relays. Attach the other side of the cut wire to the NC (normally closed) terminal on the corresponding Power Relay. Reset your device at any time using **RMS-300**. Note: in the Normally Closed configuration, power still flows to your device even when the **RMS-300** device is turned off. Virtually any 1 to 240 volt AC or DC device can be turned ON/OFF remotely this way. The two small Power Relays can pass up to 5 amps each, the larger Power Relay up to 15 amps!. For devices that should be by default turned off, use the COM and NO (normally open) configuration. Figure 4 illustrates just one of the many ways you can set up devices for remote reset.

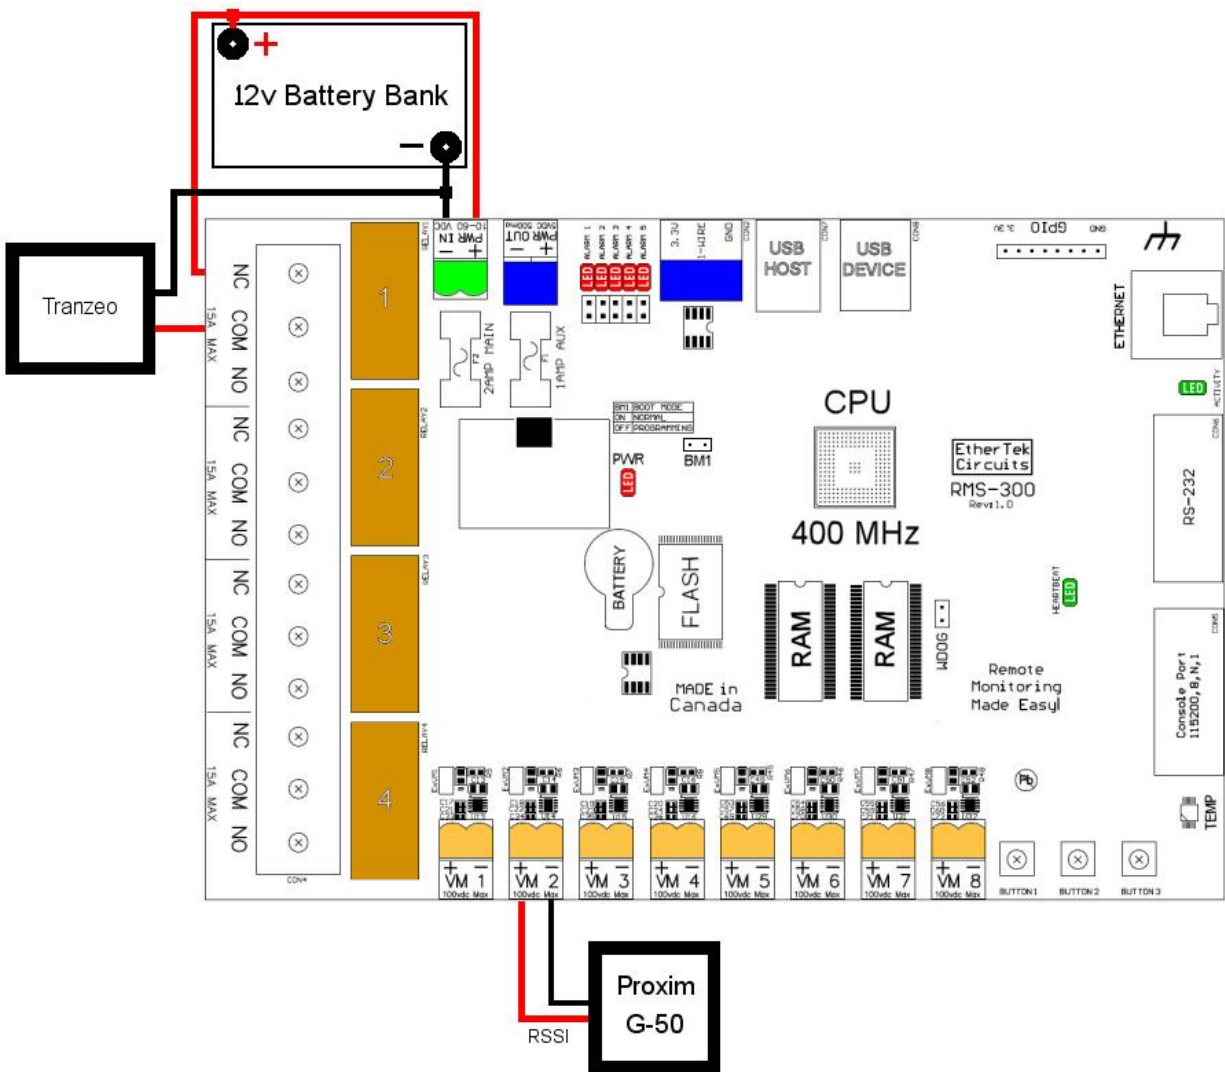


FIGURE 4

### Basic installation example 4

#### [Using the alarm pins to monitor door contacts](#)

To give your equipment room some security you can use widely available common door contacts. These contacts allow current to flow through them when they are in close proximity with each other. **RMS-300** can sense when the contacts are together or apart. Program the alarm pins to send an email, run a custom file, and/or toggle a relay when the door gets opened. The diagram below (figure 5) shows how to use Alarm pin 5 to monitor door contacts.

**Note1:** the LED5 light is on when the contacts are together. This is the armed position.

**Note2:** each Alarm pin has a corresponding LED.

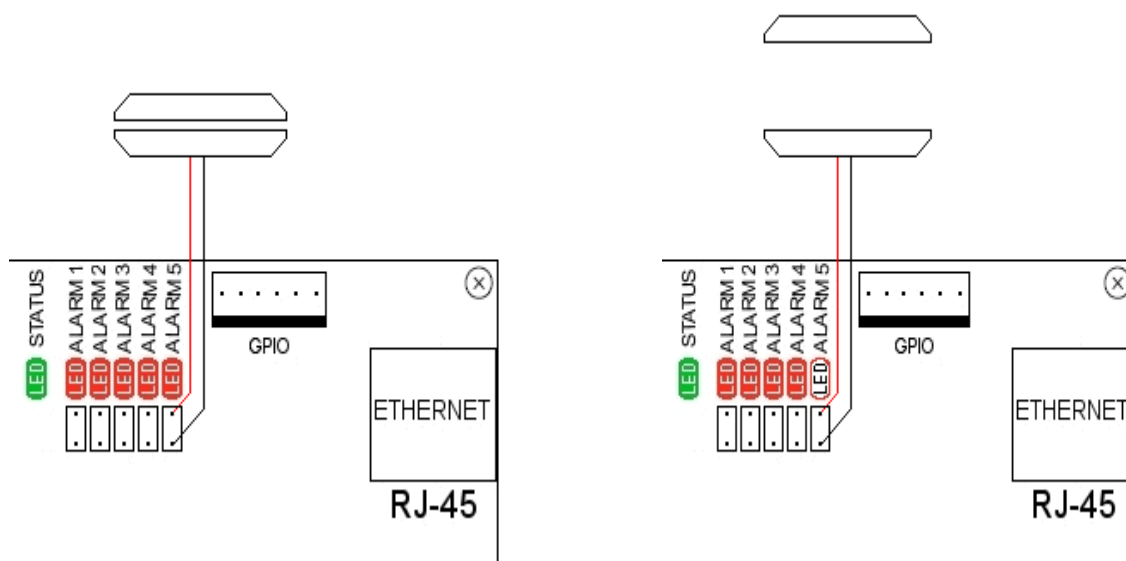


FIGURE 5




## The Relays




FIGURE 6

RMS-300 has four latching relays for remote control of AC/DC powered equipment. The latching relays do not use any power to hold them into position and they will stay in their programmed position even when the power is off. Control of each relay can be done with a web browser. The picture below shows a portion of the **RMS-300** relays web interface. In the picture below all relays are in the default "Normally Closed" position. By clicking on the relay 1 icon...

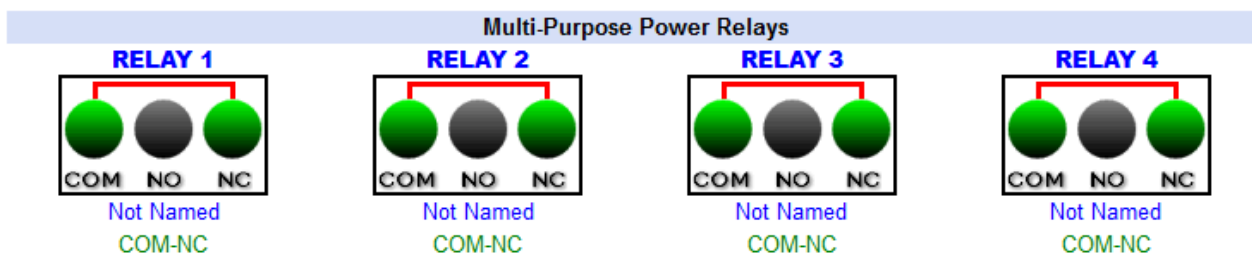

The relay will be toggled to the "Normally Open" position as shown below.

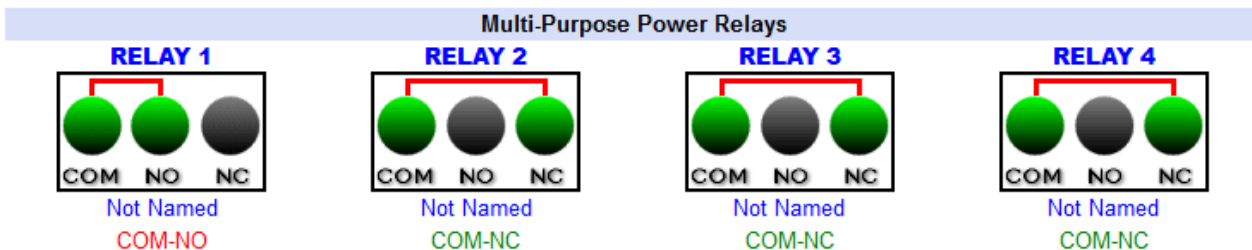



The relays can also be toggled with **RMS-300** relay Scripts. Relay scripts are made up of simple commands that control the relays. Complex relay actions can be performed to control your equipment. For example; starting a generator.

Below is a screen shot of making a relay script to toggle relay 1 to NO, wait 2 seconds, then toggle relay 1 to NC again.

Available Commands		Selected Commands
<div> <div>Relay 1 - Not Named - COM-NO</div> <div><b>Relay 1 - Not Named - COM-NC</b></div> <div>Relay 2 - Not Named - COM-NO</div> <div>Relay 2 - Not Named - COM-NC</div> <div>Relay 3 - Not Named - COM-NO</div> <div>Relay 3 - Not Named - COM-NC</div> <div>Relay 4 - Not Named - COM-NO</div> <div>Relay 4 - Not Named - COM-NC</div> <div>Delay 1 Sec</div> <div>Delay 2 Secs</div> </div>	↔	<div> <div>Relay 1 - Not Named - COM-NO</div> <div>Delay 2 Secs</div> <div>Relay 1 - Not Named - COM-NC</div> </div>
ADD		Remove

Each relay can have a name and its actions defined. Below is a screenshot of a relay script that turns a pump on for 30 minutes and then turns it off again.

Available Commands		Selected Commands
<div> <div>Relay 1 - PUMP - ON</div> <div><b>Relay 1 - PUMP - OFF</b></div> <div>Relay 2 - Not Named - COM-NO</div> <div>Relay 2 - Not Named - COM-NC</div> <div>Relay 3 - Not Named - COM-NO</div> <div>Relay 3 - Not Named - COM-NC</div> <div>Relay 4 - Not Named - COM-NO</div> <div>Relay 4 - Not Named - COM-NC</div> <div>Delay 1 Sec</div> <div>Delay 2 Secs</div> </div>	↔	<div> <div>Relay 1 - PUMP - ON</div> <div>Delay 30 Mins</div> <div>Relay 1 - PUMP - OFF</div> </div>
ADD		Remove

Control of the **RMS-300** relays can also be done by using telnet or ssh. Below is an example of using the **rmsrelay** command to toggle relay to NC then back to NO.

```
*****
*
*   RMS-300 Relay Control Program
*
* Example Usage for Built in Relays:
*
* Toggle one relay at a time.
*
* rmsrelay # no
* Connects COM + NORMALLY OPEN
*
* rmsrelay # nc
* Connects COM + NORMALLY CLOSED
*
* # can be from 1 to 4
*
* Toggle all relays at once.
* rmsrelay all no
* rmsrelay all nc
*
* Example Usage for the Relays on a
* USB Relay Daughter Board:
*
* rmsrelay rdb device rly# on
* rmsrelay rdb device rly# off
*
* rdb means use external relays.
* device is usually:
* /dev/usb/lcd0 to /dev/usb/lcd15
* rly# can be from 1 to 5
*
*****EtherTek Circuits

[root@RMS-300 /root]# rmsrelay 1 nc
Relay 1 COM-NC
[root@RMS-300 /root]# rmsrelay 1 no
Relay 1 COM-NO
[root@RMS-300 /root]# █
```

Below is an example of reading the status of Relay 1 using the command line interface. Note the relay1, relay2, relay3 and relay4 file will contain a "0" when the relay is in the "Normally Closed" position, and will contain a "1" when in the "Normally Open" position.

```
#
# cat /var/rmsdata/relay1
1
#
```

An example of running a relay script on the command line using the **rmsscript** program. The example below runs relay Script 1.

```
# rmsscript

*****
*                                     *
* Usage Example:                     *
* rmsscript 1,2.                     *
* would execute script number 1,     *
* and then script number 2           *
*                                     *
* rmsscript 1.                       *
* would only execute script number 1 *
* Dont forget the ending dot.        *
*                                     *
*****SirDan
# rmsscript 1.
# Executing relay Script ID 1 Name: Relay Test
Relay 1 On
Relay 2 On
Relay 3 On
Relay 1 Off
Relay 2 Off
Relay 3 off
relay Script ID 1 has been executed!
#
```

PHP programmers may want to write their own programs to control the relays. Below are two example PHP functions that use the PHP system command to turn relay 1 on and off.

---

```
<?php
# EtherTek Circuits 2001 - 2016
# NOTE: For backwards compatibility with other RMS boards, on and off are valid commands.
#*****
#* Relay 1 ON Function      *
#*****
function relay1no()
{
    system("/bin/rmsrelay 1 no");
}

#*****
#* Relay 1 OFF Function    *
#*****
function relay1nc()
{
    system("/bin/rmsrelay 1 nc");
}
?>
```

---


### Need More Relays?

If the four on-board relays on the **RMS-300** board are not enough for your needs, you can add five additional relays by adding a USB relay board.



The USB Relay Board gives you control of 5 SPDT relays for general purpose use via the standard USB Bus. See the USB Relay Board user manual for additional information on how to hook up the USB Relay Board to your **RMS-100**, **RMS-300** or **RMS-300** unit.


To access the Relay Daughter Board interface, go to the Device Manager and click on the USB Relay Board Icon shown below.

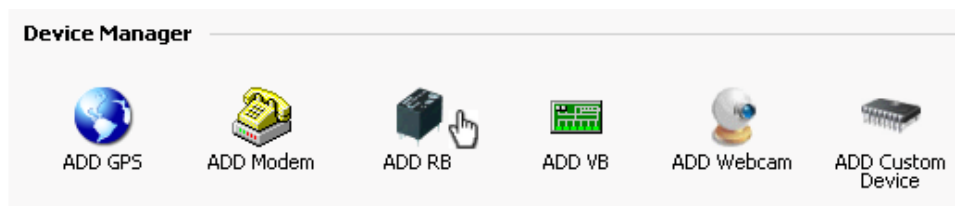


Below is the USB Relay Board setup interface. The **RMS-300** will automatically detect any USB Relay Boards found. Here you can select which Relay Daughter Board you want to work with. Decide if you want the USB Relay Board to start when the **RMS-300** system is booted, then click OK.

### Setup

#### Add New RDB




Start or Stop the Relay Daughter Board daemon in the [service manager](#).  Relay Daughter Board service Not Running.

**Product ID Found:**  EtherTek USB RELAYBOARD

**Start on Boot?:** ☐

ADD new USB Relay Board? ☒ OK ☐ Cancel

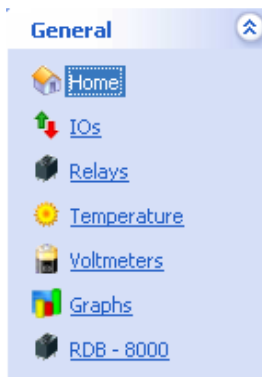

When a USB Relay board has been selected, an icon in the left navigation bar will appear. Clicking on the USB Relay Board icon will take you to the setup page for the selected USB Relay Board.

Relay Daughter Board

Product ID: 8000


RDB Relay Options

☒

Relay Action Confirmation?

☒


Set



Create Relay Scripts


RDB Relay Setup

Relay 1




Not Named

Relay 2




Not Named

Relay 3




Not Named

Relay 4



Not Named


Relay 5



Not Named


RDB Relay Control

Relay 1

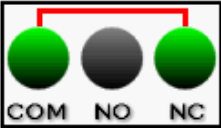


De-Energized

Relay 2

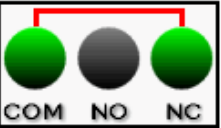


De-Energized

Relay 3

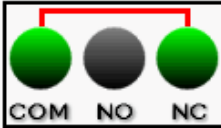


De-Energized

Relay 4



De-Energized

Relay 5

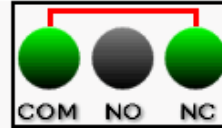

De-Energized

RDB Relay Refresh Rate

☒

Refresh

Refresh Rate


Manual

☒

Set

This page shows at a glance the status of each relay and provides a gateway for more relay options. To refresh the web page you can press the Refresh button. To have the web page automatically refresh, set the refresh rate.

## The Voltmeters

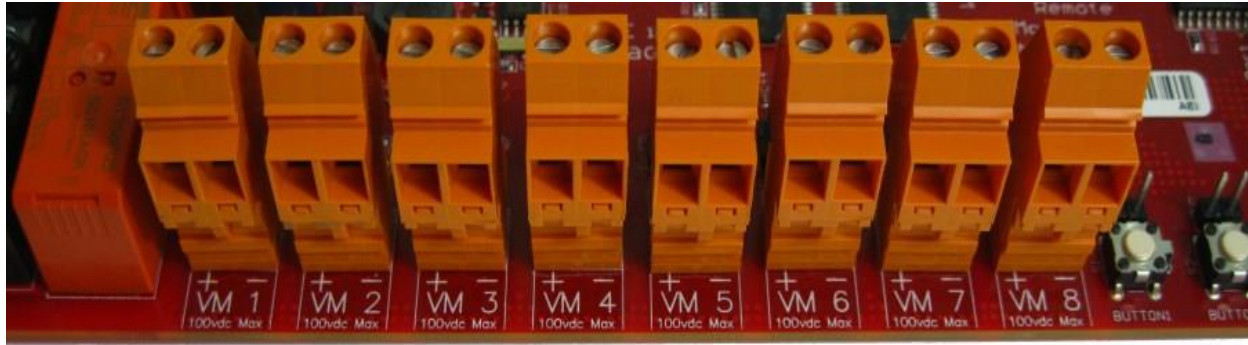

Each voltmeter is capable of measuring up to  $\pm 100$  VDC with 24-bit accuracy. Each voltmeter has its own 24 bit Delta Sigma ADC. The data and power lines for each voltmeter are isolated with a chip-scale air core transformer. This enables each voltmeter to measure different DC voltage sources without any effect on the main board or other voltages.

This technology enables the ability to measure (but not limited to):

- positive and negative voltages
- separate power sources
- individual batteries in a battery bank
- shunt voltages for equipment that may be drawing or generating power.
- solar panel voltage and amperage
- wind turbine voltage and amperage
- battery charger voltage and amperage

**Note 1:** Voltmeters that have nothing hooked up to them so that the positive and negative inputs are floating may read spurious positive and negative voltage readings, this is normal. You may dampen the voltage reading by sacrificing accuracy using the precision box. Use a number between 2 and 6 to increase or decrease the decimal place.

**Note 2:** Due to variations in components and the manufacturing process, voltmeter readings may differ slightly from each other and from your hand held DVM. Use the adjustment box to fine tune the voltmeter to display the expected value.

REMOTE MONITORING MADE EASY!

Below is a screen shot of the **RMS-300** voltmeter overview page. This page shows at a glance all voltmeter readings and provides a gateway for more voltmeter options. In the screen shot below voltmeter 1 is displaying a positive reading of a 12v battery bank. Voltmeter 2 is in ammeter mode, it is measuring the charge going into the battery bank via a 50 millivolt / 50 amp current shunt (more on using shunts below). Voltmeter 3 is measuring the output of a negative 24 volt power supply. Note: A green bar graph indicates positive voltage, a red bar graph indicates negative voltage. The graphs button takes you to a page displaying voltage or amperage readings.

Voltmeter Overview

Voltmeter	#	Range	Units	Value	Gauge	Name	Adjust	Precision
Voltmeter	1	+/- 100	VDC	12.4002	<div></div>	Not Named	1.0000	4
Voltmeter	2	+/- 100	AMPS	2.1400	<div></div>	Not Named	1.0000	4
Voltmeter	3	+/- 100	VDC	-24.000	<div></div>	Not Named	1.0000	3
Voltmeter	4	+/- 100	VDC	-0.000	<div></div>	Not Named	1.0000	3
Voltmeter	5	+/- 100	VDC	0.000	<div></div>	Not Named	1.0000	3
Voltmeter	6	+/- 100	VDC	-0.000	<div></div>	Not Named	1.0000	3
Voltmeter	7	+/- 100	VDC	-0.000	<div></div>	Not Named	1.0000	3
Voltmeter	8	+/- 100	VDC	0.000	<div></div>	Not Named	1.0000	3

Voltmeter Graphs

Voltmeter Graphs

Voltmeter Polling Speed Delay

No Delay

SET

Voltmeter Setup

Voltmeter 1

Voltmeter 2

Voltmeter 3

Voltmeter 4

Voltmeter 5

Voltmeter 6

Voltmeter 7

Voltmeter 8

Not Named

Not Named

Not Named

Not Named

Not Named

Not Named

Not Named

Not Named



## REMOTE MONITORING MADE EASY!

Clicking on one of the voltmeter icons will bring you to the setup page for that particular voltmeter. Below is a screen shot of the setup page for voltmeter one.

The screenshot shows the 'Voltmeter 1 Setup' window. The 'ADC Mode' is set to 'Voltmeter'. The 'Last reading' is 18.717384 Volts [18717 mv] as of May-06-2012 - 01:02:46 PM. The 'Precision' is 6, 'Adjustment' is 1.0000, and 'Polarity Filter' is 'Show Both'. The 'Polarity' is 'Normal'. 'Averaging Filter Enabled?' is checked with a 'Weight Factor' of 0.05. 'Polling Enabled?' is checked. 'Suppress Trigger Actions on Boot?' is unchecked. The 'Voltmeter name' is 'Main Power'. There is a text area for 'Enter Notes about this Voltmeter: (512 chars max)'. At the bottom are 'Refresh', 'Apply', 'OK', and 'Cancel' buttons.

Below the setup window is the 'Voltmeter 1 Triggers' section, which is a table with two main columns: 'Voltmeter 1 High Trigger Range' and 'Voltmeter 1 Normal Trigger'.

Enabled	Voltmeter 1 High Trigger Range	Voltmeter 1 Normal Trigger
<input type="checkbox"/>	High trigger value (max): 25.0000 High trigger value (min): 25.0000 Execute Actions Below Every: One Shot when triggered.	These events will fire when Voltmeter 1 drops below the high trigger minimum value.
<a href="#">Alerts</a>	<div>Available Alerts: EMAIL-Google Down!, EMAIL-Door Opened!, EMAIL-Load Dump Turned OFF, EMAIL-Load Dump Turned ON</div> <div>Selected Alerts: EMAIL-Load Dump Turned ON</div> <div>Add Remove</div>	<div>Available Alerts: EMAIL-Google Down!, EMAIL-Door Opened!, EMAIL-Load Dump Turned OFF, EMAIL-Load Dump Turned ON</div> <div>Selected Alerts: EMAIL-Load Dump Turned OFF</div> <div>Add Remove</div>
<a href="#">Scripts</a>	<div>Available Scripts: RELAY-Load Dump ON, RELAY-Load Dump OFF, RELAY-Generator ON, RELAY-Generator OFF</div> <div>Selected Scripts: RELAY-Load Dump ON</div> <div>Add Remove</div>	<div>Available Scripts: RELAY-Load Dump ON, RELAY-Load Dump OFF, RELAY-Generator ON, RELAY-Generator OFF</div> <div>Selected Scripts: RELAY-Load Dump OFF</div> <div>Add Remove</div>
<a href="#">File</a>	Execute File: <input type="text"/>	Execute File: <input type="text"/>

Here you can enter setup information like a name and notes for this voltmeter. The precision box is used to set how many decimal places to display, valid choices are between 2 and 6. The adjustment box is used to fine tune the voltmeter to coincide with your DVM. The polarity filter is used to filter out unwanted positive or negative readings. The Polarity Filter will allow both positive and negative, positive only, or negative only readings. The Polarity setting is used to reverse the polarity of the voltage being read. The averaging filter will settle the voltage bounce readings. The weight factor should be between 0 and 1. The larger the number, the faster the answer is obtained. The lower the number, less bounce occurs. A good default is 0.05 if the precision is set to 6. The averaging filter uses the formula below.

$$C = w(C-P)+P$$

C = Currentvoltagegreading

P = Previousvoltagegreading


w = Weight factor (as determined by value entered into text box)

The “Suppress Trigger Actions on Boot” check box is used to stop actions from happening when the RMS-300 board is warm or cold started. Each voltmeter has a High, Normal, and Low trigger range. Each High and Low trigger range has a maximum and minimum value. The range in between the maximum and minimum value acts like a dead band area. Triggers can be set to fire alerts or scripts when the voltage is either too high or too low. The High Trigger is used when the voltage rises above the High Trigger maximum value. The Normal Trigger is used when the voltage falls below the High Trigger minimum value. The “Execute Every” box is used to select how often the condition should be tested and acted upon. Each voltmeter trigger can also execute a custom file stored on the RMS-300 board.

Below is the Low Trigger interface. The Low Trigger is used when the voltage falls below the Low Trigger maximum value. The Normal Trigger is used when the voltage rises above the Low Trigger minimum value.

Enabled	Voltmeter 5 Low Trigger Range	Voltmeter 5 Normal Trigger
<input type="checkbox"/>	Low trigger value (min): <input type="text" value="0.0000"/> Low trigger value (max): <input type="text" value="0.0000"/> Test Every: <input type="text" value="One Shot"/>	These events will fire when Voltmeter 5 raises above the low trigger maximum value.
<a href="#">Alerts</a>	<div> <div>EMAIL-Google Down!</div> <div>EMAIL-Door Opened!</div> <div>EMAIL-Load Dump Turned OFF</div> <div>EMAIL-Load Dump Turned ON</div> </div> <div> <input type="button" value="Add"/> <input type="button" value="Remove"/> </div>	<div> <div>EMAIL-Google Down!</div> <div>EMAIL-Door Opened!</div> <div>EMAIL-Load Dump Turned OFF</div> <div>EMAIL-Load Dump Turned ON</div> </div> <div> <input type="button" value="Add"/> <input type="button" value="Remove"/> </div>
<a href="#">Scripts</a>	<div> <div>RELAY-Load Dump ON</div> <div>RELAY-Load Dump OFF</div> <div>RELAY-Generator ON</div> <div>RELAY-Generator OFF</div> </div> <div> <input type="button" value="Add"/> <input type="button" value="Remove"/> </div>	<div> <div>RELAY-Load Dump ON</div> <div>RELAY-Load Dump OFF</div> <div>RELAY-Generator ON</div> <div>RELAY-Generator OFF</div> </div> <div> <input type="button" value="Add"/> <input type="button" value="Remove"/> </div>
<a href="#">File</a>	Execute File: <input type="text"/>	Execute File: <input type="text"/>

### Voltmeter Triggers Explained

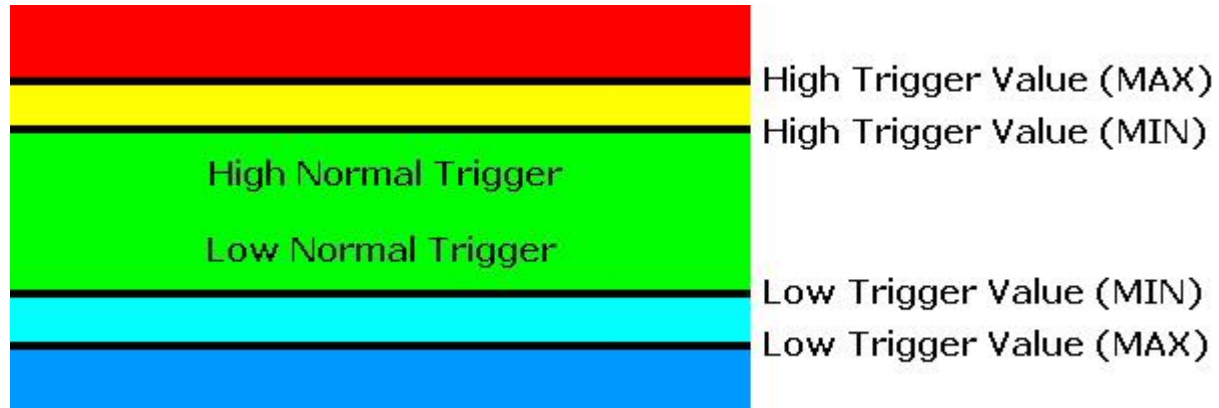

When a voltage is within a trigger range (as shown by the different colour bands), the action will only execute as often as specified by the "Execute Actions Below Every" pull down list box. If a voltage is in the green (Normal Range), and moves above the High trigger value (MIN) into the yellow, no actions occur. Only if the voltage moves into the red range (past High Trigger Value (MAX)) will the action occur. If the voltage flutters into the yellow and back into the red, this does not reset any triggers. High Trigger condition range only exits once the voltage goes back into the green where it will execute the "High Normal Trigger" action only once.

The same theory applies to the Low Trigger values. If a voltage is in the green (Normal Range), and moves below the Low trigger value (MIN) into the light blue, no actions occur. Only if the voltage drops into the dark blue range (past Low Trigger Value (MAX)) will the actions occur. If the voltage flutters into the light blue and back into the dark blue, this does not reset any triggers. Low Trigger condition range only exits once the voltage goes back into the green where it will execute the "Low Normal Trigger" action only once.


### Voltmeters on the Command Line

Below is an example of reading the voltmeters on the command line. The voltmeter data files can be found in the /var/rmsdata/ directory. Note: the voltmeter readings are stored in files. Voltmeter 1's storage file is called vm1. Voltmeter 2's storage file is called vm2 etc.

```
# cat /var/rmsdata/vm1
12.829453
# cat /var/rmsdata/vm*
12.829380
0.000019
-25.241156
0.000115
0.000091
0.000164
#
```

### Voltmeter Graphs

Each voltmeter has corresponding graphs associated with it. Below is a graph showing volts over a 1 week period. Day, week, month, and year graphs are available.

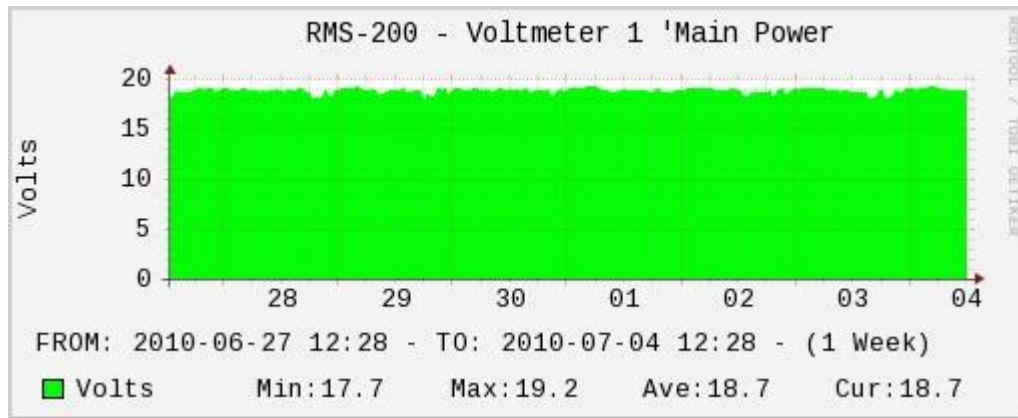


### How to measure amperage by using a shunt

If you are managing a remote battery powered site, knowing your battery voltage is vital. It is also a key thing to know how much charging you are putting back into your batteries, and how much power is being consumed by your equipment. It is also a key thing to know how much charging you are putting back into your batteries. Using a common shunt, it is possible to obtain a millivolt reading that relates to an amperage reading. The voltmeters on the **RMS-300** board are perfect for this as they are very sensitive and can easily read millivolt readings.

### A word on shunts.


Shunts are defined as a resistive load through which electricity is diverted. Often the resistance of a shunt is known precisely and is used to determine amperage by measuring the voltage across it and using Ohm's law ( $I = V/R$ ). It also allows high current measurements with low-current equipment. Some popular shunts are 50mv/50amp and 100mv/100amp. The relationship between the millivolt reading and the current going through the shunt makes figuring out the amperage easy. For example, in the case of the 50mv/50amp shunt: if you had 50 amps of charging going through the shunt then the millivolt reading would be 50mv. If you had 25 amps of charging going through the shunt then the millivolt reading would be 25mv etc etc. When measuring current over 100 amps, continuous operating current should not exceed 2/3 ammeter shunt rating. To ensure proper operation, the shunt temperature is in no way to exceed 145°C, as a permanent change in resistance will occur. For example, if continuous current for an application is 500 amps, the ammeter shunt rating should be no less than 750 amps. This applies to both 50 and 100 millivolt current drop shunts.

Below is a drawing of a 50mv/50amp shunt.

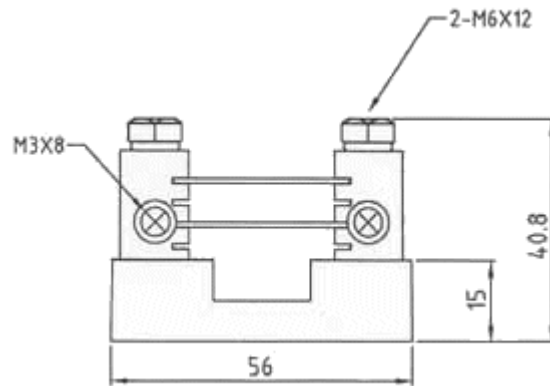

Below is an example diagram of how to use **RMS-300** with a shunt to measure charging from a solar panel array. The negative solar panel lead is connected to the battery negative terminal. The positive solar panel lead is routed to the positive battery terminal by way of a 50 millivolt 50 amp current shunt. From one side of the shunt there is a sense wire run to the negative input on VM5. From the other side of the shunt there is a sense wire run to the positive input on VM5.

**NOTE:** Consult the Owners Manual or the Manufacturer of the equipment you are measuring to determine if there is any preference on which power wire the shunt should be hooked up to.

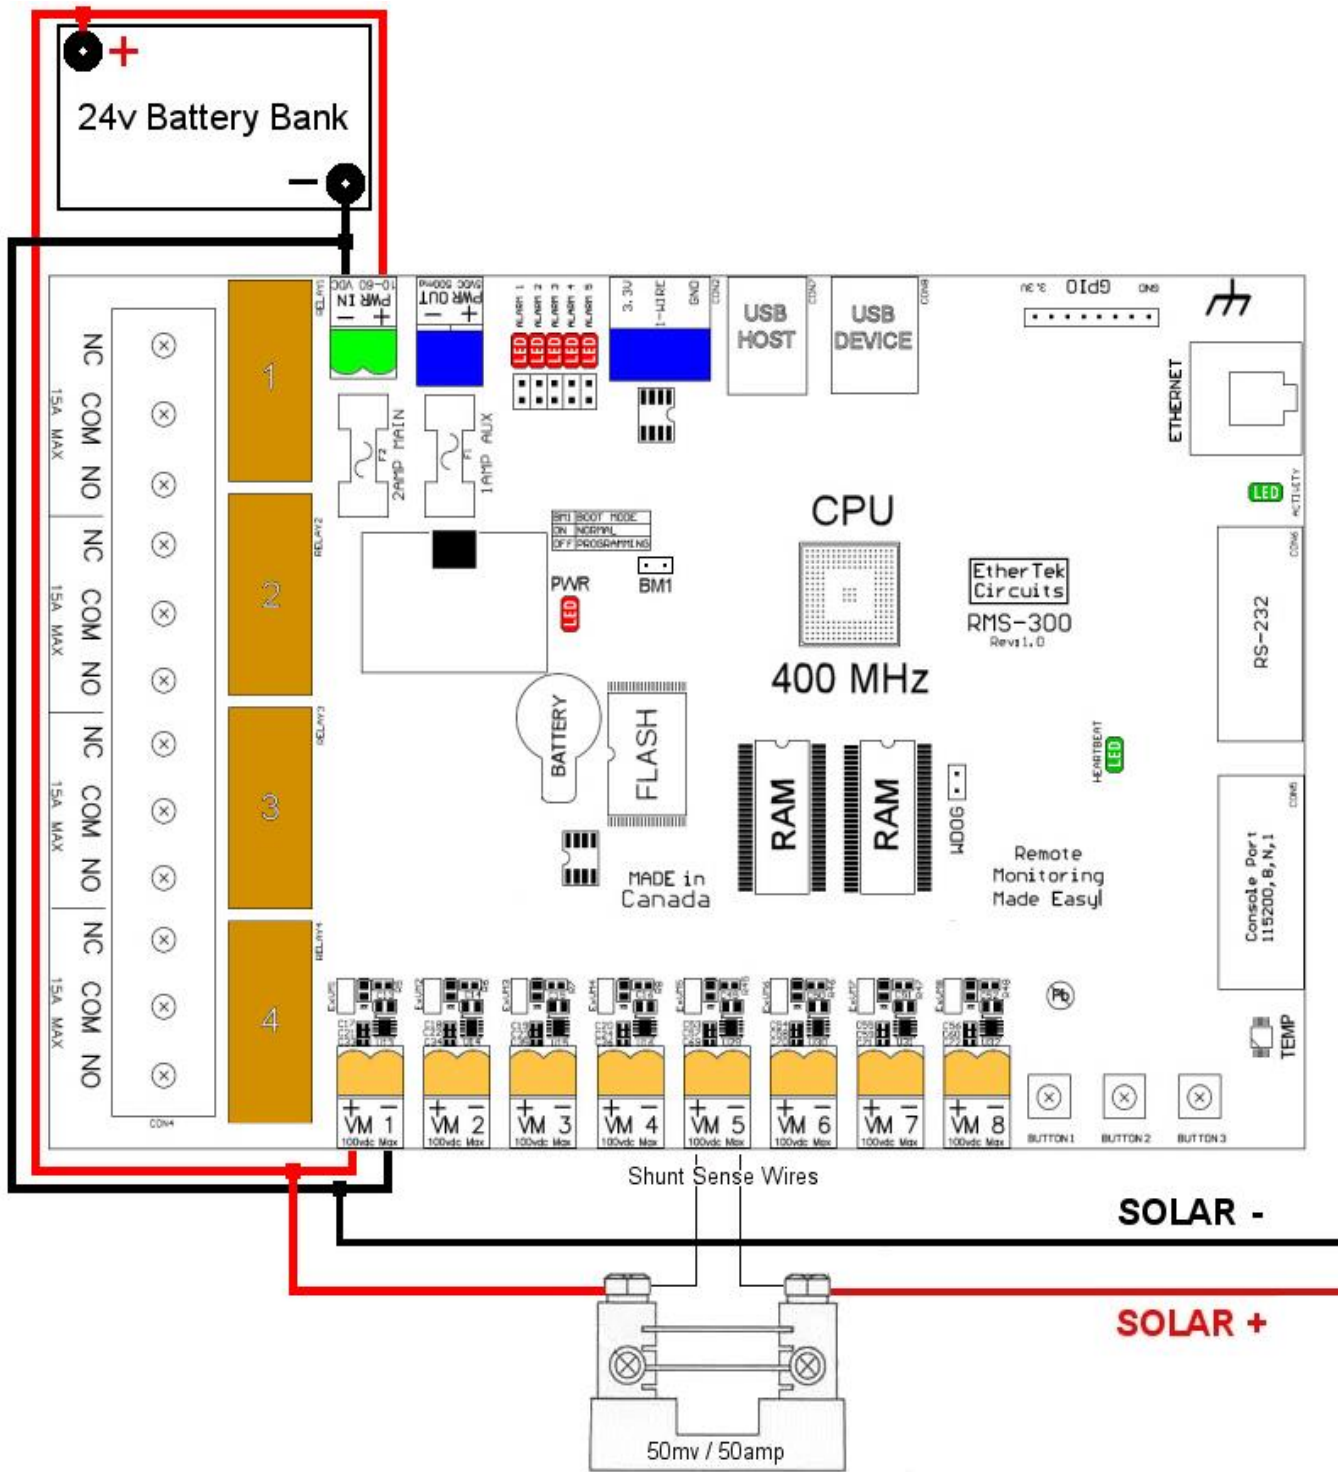

Below is a screen shot of how to setup Voltmeter 3 to act as an ammeter to show how much charging is going into the batteries from solar panels. First, put Voltmeter 3 into ammeter mode and click Apply. Next, enter valid shunt values (amperage rating, millivolt value), enter name and notes and then click Apply or click Ok.

Voltmeter 1 Setup

ADC Mode:

☐ Voltmeter
☒ Ammeter

Shunt Values:

Amp Rating: 50

Millivolt Rating: 50

Wattmeter:

☐ Enable Watt Mode

2

Choose which ADC channel (in Voltmeter Mode) that will be used as the base reading for watt calculations

ADC reading:

3.0000 Amps (Raw value: 0.003003 [ 3 mv]) as of Jan-03-2016 - 11:23:00 PM

Accumulated Amp Hours:

0.000003

Reset Amp Hour Counter 1

Precision:

4

(Accurate to how many decimal places? 1 - 6)

Adjustment:

1.0000

Multiply or Divide

0.0000

Add or Subtract

Polarity Filter:

☒ Show Both
☐ Show Positive Only
☐ Show Negative Only

Polarity:

☒ Normal
☐ Reverse

Averaging Filter Enabled?

☐

Weight Factor: 0.05

Polling Enabled?

☒

Suppress Trigger Actions on Boot?

☐

Voltmeter Graph Options:

☐ Slope Enabled?
☐ Limits Enabled?

0.0000

 Lower Limit

100.00

 Upper Limit

Voltmeter name (25 chars max):

Solar Panel Array

Enter Notes about this Voltmeter: (512 chars max)

Solar Panels on Apex Mountain (4 x 64 watt Unisolar)

Refresh

Apply

OK


Cancel

If everything is hooked up correctly you should be able to see how much amperage is being put into your batteries. This technique can be used to measure DC current being put into your batteries by solar panels, a wind generator, or a battery charger. **RMS-300** can monitor your voltage and amperage remotely and alert you to dangerous battery conditions.



## REMOTE MONITORING MADE EASY!

Below is an example of how to use **RMS-300** with a shunt to measure current draw from your equipment. The negative load wire is connected to the battery negative terminal. The positive wire is routed to the positive battery terminal by way of a 50 millivolt 25 amp current shunt. From one side of the shunt there is a sense wire run to the negative input on VM5. From the other side of the shunt there is a sense wire run to the positive input on VM5. **NOTE:** Consult the Owners Manual or the Manufacturer of the equipment you are measuring to determine if there is any preference on which power wire the shunt should be hooked up to.

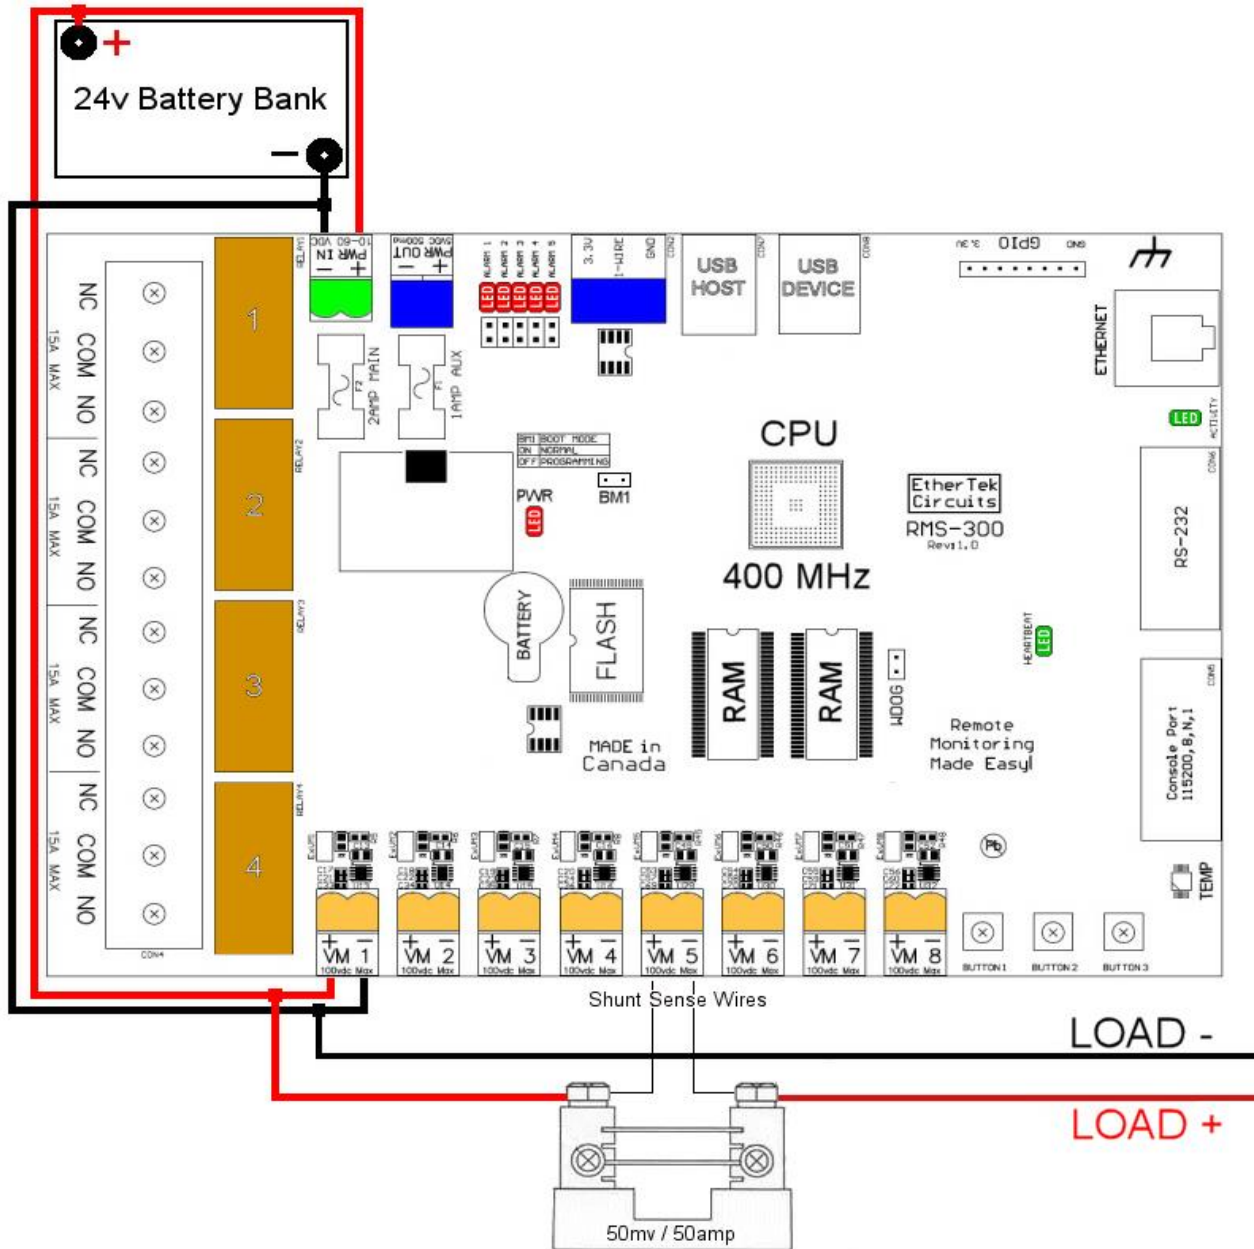




### Need More Voltmeters?

If the six on board voltmeters on the **RMS-300** board are not enough for your needs, you can add six additional isolated voltmeters by adding a USB isolated voltmeter board.



The USB Isolated Voltmeter Board gives you control of six +/- 100vdc isolated voltmeters via the standard USB Bus. See the USB Isolated Voltmeter user manual for additional information on how to hook up the USB Isolated Voltmeter Board to your **RMS-100**, **RMS-300** or **RMS-300** unit. To access the USB Isolated Voltmeter Board interface, go to the Device Manager and click on the USB Isolated Voltmeter Board Icon shown below.

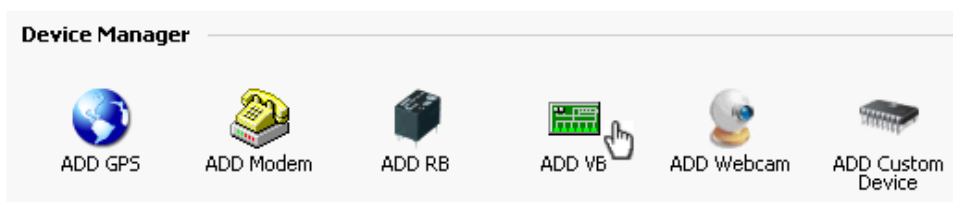

If a USB Isolated Voltmeter Board gets detected by the RMS-300 system, it will show up in the product ID box shown below. Decide if the USB Isolated Voltmeter board should be active when the RMS-300 board boots, then press the OK button to add an icon to the main left navigation bar

## Setup

### Edit VDB Voltmeter Board



Start or Stop the Voltmeter Daughter Board daemon in the [service manager](#). ● Voltmeter Daughter Board service Running.

Product ID Found:

000A

EtherTek ISOVOLTMETER


Start on Boot?:

☐


OK



Cancel

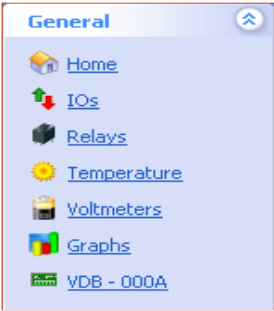

Clicking on the VDB icon in the left navigation bar takes you to the main setup page of the USB Isolated Voltmeter board. Below is a screen shot of the familiar voltmeter setup page.

Voltmeter Daughter Board

Product ID: 000A

Isolated Voltmeter Overview

Iso Voltmeter #	Range	Units	Value	Gauge	Name	Adjust	Precision
Iso Voltmeter 1	± 0 - 100	VDC	-0.0002	<div></div>	<a href="#">Not Named</a>	1.0000	4
Iso Voltmeter 2	± 0 - 100	VDC	-0.0001	<div></div>	<a href="#">Not Named</a>	1.0000	4
Iso Voltmeter 3	± 0 - 100	VDC	-0.0001	<div></div>	<a href="#">Not Named</a>	1.0000	4
Iso Voltmeter 4	± 0 - 100	VDC	0.0002	<div></div>	<a href="#">Not Named</a>	1.0000	4
Iso Voltmeter 5	± 0 - 100	VDC	0.0001	<div></div>	<a href="#">Not Named</a>	1.0000	4
Iso Voltmeter 6	± 0 - 100	VDC	24.3101	<div></div>	<a href="#">Not Named</a>	1.0000	4

Refresh

Refresh Rate

Manual

Set

Voltmeter Daughter Board Setup

Iso Voltmeter 1


Iso Voltmeter 2

Iso Voltmeter 3


Iso Voltmeter 4

Iso Voltmeter 5


Iso Voltmeter 6




Not Named




Not Named




Not Named



Not Named



Not Named



Not Named

This page shows at a glance all voltmeter readings and provides a gateway for more voltmeter options. In the screen shot above voltmeter 6 is displaying a positive reading of a 24v battery bank. Note: A green bar graph indicates positive voltage, a red bar graph indicates negative voltage. To refresh the web page you can press the Refresh button. To have the web page automatically refresh, set the refresh rate.

## REMOTE MONITORING MADE EASY!

Clicking on one of the voltmeter icons will bring you to the setup page for that particular voltmeter.

**Voltmeter 5 Setup**

ADC Mode: ☒ Voltmeter ☐ Ammeter ☒ Scale Mode Jumper

Last reading: **26.3271 Volts [26327.1 mv]** as of **28-Apr-2008 06:44:02**

Precision:  (Accurate to how many decimal places? 2-6)

Adjustment:

Suppress Trigger Actions on Boot? ☐

Voltmeter name (20 chars max):

Enter Notes about this Voltmeter: (512 chars max)

**Voltmeter 5 Triggers**

Enabled	Voltmeter 5 High Trigger Range	Voltmeter 5 Normal Trigger
<input checked="" type="checkbox"/>	High trigger value (max): <input type="text" value="26.0000"/> High trigger value (min): <input type="text" value="25.0000"/> Test Every: <input type="text" value="One Shot"/>	These events will fire when Voltmeter 5 drops below the high trigger minimum value.
<a href="#">Alerts</a>	<div>EMAIL-Google Down! EMAIL-Door Opened! EMAIL-Load Dump Turned OFF EMAIL-Load Dump Turned ON</div> <div><input checked="" type="button" value="Add"/> <input type="button" value="Remove"/></div>	<div>EMAIL-Google Down! EMAIL-Door Opened! EMAIL-Load Dump Turned OFF EMAIL-Load Dump Turned ON</div> <div><input checked="" type="button" value="Add"/> <input type="button" value="Remove"/></div>
<a href="#">Scripts</a>	<div>RELAY-Load Dump ON RELAY-Load Dump OFF RELAY-Generator ON RELAY-Generator OFF</div> <div><input checked="" type="button" value="Add"/> <input type="button" value="Remove"/></div>	<div>RELAY-Load Dump ON RELAY-Load Dump OFF RELAY-Generator ON RELAY-Generator OFF</div> <div><input checked="" type="button" value="Add"/> <input type="button" value="Remove"/></div>
<a href="#">File</a>	Execute File: <input type="text"/>	Execute File: <input type="text"/>

Here you can enter setup information like a name and notes for this voltmeter. The precision box is used to set how many decimal places to display, valid choices are between 2 and 6. The adjustment box is used to fine tune the voltmeter to coincide with your DVM. The “Suppress Trigger Actions on Boot” check box is used to stop actions from happening when the RMS-300 board is warm or cold started. Each voltmeter has a High, Normal, and Low trigger range. Each High and Low trigger range has a maximum and minimum value. The range in between the maximum and minimum value acts like a dead band area. Triggers can be set to fire alerts or scripts when the voltage is either too high or too low. The High Trigger is used when the voltage rises above the High Trigger maximum value. The Normal Trigger is used when the voltage falls below the High Trigger minimum value. The “Test Every” box is used to select how often the condition should be tested and acted upon. Each voltmeter trigger can also execute a custom file stored on the RMS-300 board.

## REMOTE MONITORING MADE EASY!

Below is the Low Trigger interface. The Low Trigger is used when the voltage falls below the Low Trigger maximum value. The Normal Trigger is used when the voltage rises above the Low Trigger minimum value.

Enabled	Voltmeter 5 Low Trigger Range	Voltmeter 5 Normal Trigger
<input type="checkbox"/>	Low trigger value (min): <input type="text" value="0.0000"/> Low trigger value (max): <input type="text" value="0.0000"/> Test Every: <input type="text" value="One Shot"/>	These events will fire when Voltmeter 5 raises above the low trigger maximum value.
<a href="#">Alerts</a>	<div>EMAIL-Google Down! EMAIL-Door Opened! EMAIL-Load Dump Turned OFF EMAIL-Load Dump Turned ON</div> <div><input type="button" value="Add"/> <input type="button" value="Remove"/></div>	<div>EMAIL-Google Down! EMAIL-Door Opened! EMAIL-Load Dump Turned OFF EMAIL-Load Dump Turned ON</div> <div><input type="button" value="Add"/> <input type="button" value="Remove"/></div>
<a href="#">Scripts</a>	<div>RELAY-Load Dump ON RELAY-Load Dump OFF RELAY-Generator ON RELAY-Generator OFF</div> <div><input type="button" value="Add"/> <input type="button" value="Remove"/></div>	<div>RELAY-Load Dump ON RELAY-Load Dump OFF RELAY-Generator ON RELAY-Generator OFF</div> <div><input type="button" value="Add"/> <input type="button" value="Remove"/></div>
<a href="#">File</a>	Execute File: <input type="text"/>	Execute File: <input type="text"/>

## The Temperature

Below is a screen shot of the **RMS-300** temperature setup page. Preliminary setup steps are done in this area like entering notes and choosing the temperature format.

**Current Board Temperature**

**Board Temperature in Fahrenheit:** 77.9

**Board Temperature in Celsius:** 25.5

**Celsius Adjustment:**

**Enter Notes about Temperature monitoring and control:** (512 chars max)

Enter notes on how the temperature is monitored and controlled

☐ Triggers default to Fahrenheit  
☒ Triggers default to Celsius

The **RMS-300** web interface has High and Low triggers that can be set to fire alerts or scripts when the temperature is either too high or too low. Use the relay scripts to turn on a cooling fan for example. The High Trigger is used when the temperature rises above the High Trigger value. The Normal Trigger is used when the temperature falls below the High Trigger value.

**Temperature Triggers**

Enabled	Temperature High Trigger	Temperature Normal Trigger
<input type="checkbox"/>	<p>High trigger value: <input type="text" value="44.0000"/> C</p> <p>Flap Time: <input type="text" value="One Shot"/></p>	<p>These events will fire when the Temperature drops below the high trigger value.</p>
<b>Alerts</b>	<div> <div> EMAIL-Google Do SMS-Not Named EMAIL-Google Up EMAIL-Apex: AP D EMAIL-Apex: AP U </div> <div> <input checked="" type="button" value="Add"/>  <input checked="" type="button" value="Remove"/> </div> </div> <div></div>	<div> <div> EMAIL-Google Do SMS-Not Named EMAIL-Google Up EMAIL-Apex: AP D EMAIL-Apex: AP U </div> <div> <input checked="" type="button" value="Add"/>  <input checked="" type="button" value="Remove"/> </div> </div> <div></div>
<b>Scripts</b>	<div> <div> io-LED Off io-LED On relay-Gen Off relay-Gen On </div> <div> <input checked="" type="button" value="Add"/>  <input checked="" type="button" value="Remove"/> </div> </div> <div></div>	<div> <div> io-LED Off io-LED On relay-Gen Off relay-Gen On </div> <div> <input checked="" type="button" value="Add"/>  <input checked="" type="button" value="Remove"/> </div> </div> <div></div>

## REMOTE MONITORING MADE EASY!

Below is the Low Trigger interface. The Low Trigger is used when the temperature falls below the Low Trigger Max value. The Normal Trigger is used when the temperature rises above the Low Trigger Min value.


Enabled	Temperature Low Trigger	Temperature Normal Trigger
<input type="checkbox"/>	<p><b>Celsius</b></p> <p>Low trigger value (min): <input type="text" value="10.0000"/></p> <p>Low trigger value (max): <input type="text" value="5.0000"/></p> <p>Test Every: <input type="button" value="One Shot"/></p>	<p>These events will fire when the Temperature raises above the low trigger value.</p>
<b>Alerts</b>	<div><div>EMAIL-Google Do SMS-Not Named EMAIL-Google Up EMAIL-Apex AP D EMAIL-Apex AP U</div><div><input checked="" type="checkbox"/> Add <input checked="" type="checkbox"/> Remove</div><div></div></div>	<div><div>EMAIL-Google Do SMS-Not Named EMAIL-Google Up EMAIL-Apex AP D EMAIL-Apex AP U</div><div><input checked="" type="checkbox"/> Add <input checked="" type="checkbox"/> Remove</div><div></div></div>
<b>Scripts</b>	<div><div>io-LED Off io-LED On relay-Gen Off relay-Gen On</div><div><input checked="" type="checkbox"/> Add <input checked="" type="checkbox"/> Remove</div><div></div></div>	<div><div>io-LED Off io-LED On relay-Gen Off relay-Gen On</div><div><input checked="" type="checkbox"/> Add <input checked="" type="checkbox"/> Remove</div><div></div></div>
<div><input checked="" type="checkbox"/> Apply</div>		

Below is an example of reading the temperature on the command line. **Note:** the file tempf contains the board temperature in Fahrenheit. The file tempc contains the board temperature in Celsius.

```
# cat /var/rmsdata/tempf
82.4
# cat /var/rmsdata/tempc
28.0
#
```

## The I/O Pins and Push Buttons


Below is a screen shot of the **RMS-300** I/O overview page. Here you can choose which of the boards Alarm or I/O pins to control. **RMS-300** has 5 dedicated Alarm Pins that have a corresponding LED. Use them with common door contacts to monitor entry points. **RMS-300** also has 4 general purpose pins that can be set as Inputs or Outputs. These multi purpose I/O pins can be controlled or read from either the web page interface or a command shell. **RMS-300** also has 2 micro push buttons that have special attributes when the **RMS-300** board is booting. After the **RMS-300** board is finished booting these buttons are free for you to use for controlling your devices.



Create I/O  
Scripts

Alarm Input Setup


Alarm 1



Not Named

TRIGGERED


Alarm 2



Not Named

TRIGGERED


Alarm 3



Not Named

TRIGGERED


Alarm 4



Not Named

TRIGGERED

Alarm 5




Not Named

ARMED


GPIO Setup

GPIO 1




Not Named

GPIO 2




Not Named

GPIO 3




Not Named

GPIO 4




Not Named

GPIO 5



Not Named


GPIO 6



Not Named


Micro Push Button Setup

Button 1




Not Named

Button 2



Not Named

Button 3



Not Named

35

## REMOTE MONITORING MADE EASY!

Below is a screen shot of the **RMS-300** I/O setup page for GPIO 1. GPIO pins can be configured to be 3.3 volt Inputs or Outputs. Use these pins to control any manner of devices, or sense condition changes and react with alerts or scripts.

**GX IO 1 Triggers**

Enabled	<b>GX IO 1 High Trigger</b>	<b>GX IO 1 Low Trigger</b>
<input type="checkbox"/>	These events will fire when GX IO 1 is a logic high. Delay Time: One Shot ▾	These events will fire when GX IO 1 is a logic low. Delay Time: One Shot ▾
<b>Alerts</b>	<div>EMAIL-Google Do SMS-Not Named EMAIL-Google Up EMAIL-Apex AP D EMAIL-Apex AP U</div> <div>✓ Add ✗ Remove</div> <div></div>	<div>EMAIL-Google Do SMS-Not Named EMAIL-Google Up EMAIL-Apex AP D EMAIL-Apex AP U</div> <div>✓ Add ✗ Remove</div> <div></div>
<b>Scripts</b>	<div>io-LED Off io-LED On relay-Gen Off relay-Gen On</div> <div>✓ Add ✗ Remove</div> <div></div>	<div>io-LED Off io-LED On relay-Gen Off relay-Gen On</div> <div>✓ Add ✗ Remove</div> <div></div>

**GX IO 1 Output Control**

CurrentIO state: LOW

Default bootup state: Low ▾

✓ Set High

OK Cancel



## GPIO

Below is a pinout diagram of Con 8 on the **RMS-300** board. These are 3.3 volt general purpose I/O pins.



## ALARMS

Below is a pinout diagram of the Alarm pins on the RMS-300 board. These input pins are pulled up to 3.3 volts.

Note:


JP1 - Pin 1 is Alarm input 1. Pin 2 is GND.

JP2 - Pin 1 is Alarm input 2. Pin 2 is GND.

JP3 - Pin 1 is Alarm input 3. Pin 2 is GND.

JP4 - Pin 1 is Alarm input 4. Pin 2 is GND.

JP5 - Pin 1 is Alarm input 5. Pin 2 is GND.

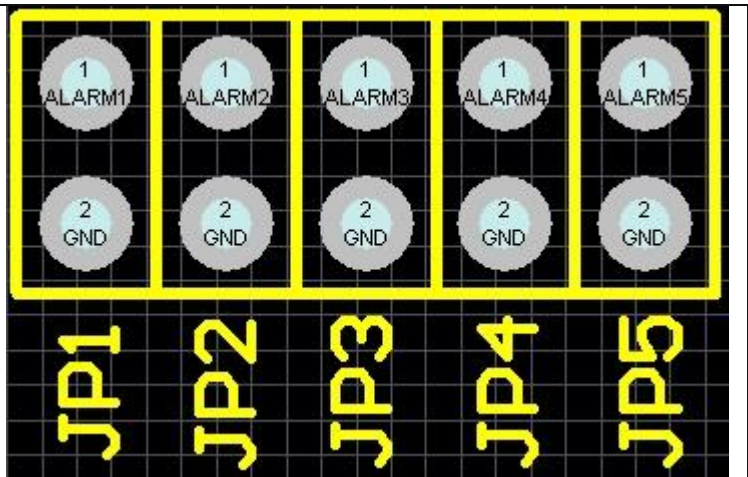

## **PUSH BUTTONS**

Below is a screen shot of the **RMS-300** Push Button 1 setup page. Use these buttons to manually control devices, or use them for onsite testing of alerts or scripts.

Button 1 Setup

Button name (20 chars max):

Button 1

Enter Notes about this Button:  
(512 chars max)

Enter notes on how this Button is hooked up...

Current Button state: UP

Button 1 Triggers

Enabled	Button 1 Down Trigger	Button 1 Up Trigger
<input type="checkbox"/>	<div>These events will fire when Button 1 is Down.</div> <div>Delay Time: One Shot</div>	<div>These events will fire when Button 1 is Up.</div> <div>Delay Time: One Shot</div>
Alerts	<div></div> <div>Add Remove</div>	<div></div> <div>Add Remove</div>
Scripts	<div></div> <div>Add Remove</div>	<div></div> <div>Add Remove</div>

OK

Cancel

### **Button 3 Note:**

When the **RMS-300** is booting up it first checks to see if Button 1 is being held down. If Button 1 is held down then all of the configuration files in /etc are re-written bringing the **RMS-300** unit to a factory default condition.

### **Button General Note:**

When the **ALARM LEDS** on the **RMS-300** board perform a flashing sequence, the Linux OS has fully booted and normal button operation can commence.

## USB Support

### **CAMERAS**

RMS-300 uses the UVC driver that supports a wide variety of USB web cameras. These inexpensive cameras come in handy to passively monitor things like door ways, fuel gauges, LCD displays, etc.

### **USB to SERIAL**

RMS-300 has built in USB to Serial converter drivers. Support for “generic type” and USB to Serial converters that use the “Prolific” chipset.

### **USB WIRELESS**

RMS-300 uses the RayLink wireless device driver. Some USB wireless devices such as the Dlink USB stick have been tested giving RMS-300 an alternative path to the internet.

### **GENERAL USB SUPPORT**

RMS-300 supports a wide variety of USB devices. Check with us to find out if your USB device can be made compatible with RMS-300.


## Firmware Upgrades

Please visit <http://www.remotemonitoringsystems.ca/rms200/firmware.php> for the newest firmware revisions for your **RMS-300** board. There are two easy ways to upgrade the firmware on the **RMS-300** board. You may either choose the Web Browser based method or the FTP based method.

### Web Based Upgrade

To perform a web browser based firmware upgrade, first download the latest Kernel or RootFS file from the [firmware download area](#) to your computer. Connect to the **RMS-300** board with your favorite web browser and click on the setup icon. When the setup page loads, click on the Firmware Upgrade icon to be taken to the screen below.

**FIRMWARE UPDATE AREA**



### [Linux Kernel Upgrade](#)

This operation will overwrite the Linux Kernel partition (/dev/mtd1) on the RMS-200 board. Files stored in the Root File System partition (/dev/mtd2) will be untouched by the process, including the RMS-200 SQL database, configuration files (under /etc), and web pages (under /usr/local/webif).


The RMS-200 board will retain the system settings it had prior to the Linux Kernel upgrade.

To upgrade, select the uImage file by pressing "Browse..." and then press "Upgrade".

Selected uImage:

**IMPORTANT:** After pressing "Upgrade", the transfer process will start. During this phase:

- Do **NOT** close the browser, Do **NOT** press "Back," Do **NOT** press "Stop".
- Do **NOT** reset or turn off the RMS-200 board. The unit will restart automatically after the upgrade is completed.



### [Root File System Upgrade](#)

- Before upgrading... [Download the RMS-200 SQL Database](#)

The Root File System Upgrade procedure will overwrite the Root File System partition (/dev/mtd2) on the RMS-200 board. Files stored in the Root File System partition (/dev/mtd2) will be lost!

The RMS-200 board will retain the system settings it had prior to the Root File System upgrade.

To upgrade, select the rootfs file by pressing "Browse..." and then press "Upgrade".

Selected Root FS:

**IMPORTANT:** After pressing the "Upgrade" button, the transfer process will start. During this phase:

- Do **NOT** close the browser, Do **NOT** press "Back," Do **NOT** press "Stop".
- Do **NOT** reset or turn off the RMS-200 board. The unit will restart automatically after the upgrade is completed.

After the Upgrade process completes, you may restore the RMS-200 SQL Database.

## REMOTE MONITORING MADE EASY!

Decide which type of upgrade that goes with the firmware you downloaded and click on the appropriate browse button to locate the firmware image. When the firmware image is selected, click on the Upgrade button. After a time you should see similar output as below.

```
The file rootfs-675-1182185503 has been uploaded
```

```
Starting Root File System Upgrade...
```

```
Stopping processes ...  
Sending TERM signal ...  
Most processes stopped.
```

```
Erasing 128 Kibyte @ 0 -- 0 % complete. Cleanmarker written at 0.  
Erasing 128 Kibyte @ 20000 -- 0 % complete. Cleanmarker written at 20000.  
Writing data to block 0  
Writing data to block 20000  
Checksum = 2020866943  
File Stamp = 2020866943
```

```
Root File System upgrade complete....
```


```
The unit will now reboot.  
To continue, please connect to the unit again.  
There may be a short delay before the new connection is accepted.  
This connection will now close.
```

When the firmware programming is complete, the **RMS-300** board will reboot with the new firmware image. Wait 45 seconds and then reconnect. When connection is reestablished you may configure the **RMS-300** board, upload your data base, add scripts etc.

**FTP Based Upgrade**

To perform an ftp based firmware upgrade, first download the latest Kernel or RootFS file from the [firmware download area](#) to your computer. The examples below assume a computer running Windows, but the commands will be similar on any OS. The examples below assume a folder on the C:\ drive called RMS300 that contains the firmware that you would like to upload to your RMS-300 board. The example below assumes that the Telnet Server has been enabled on the RMS-300 board. In the example below a rootfs firmware upgrade is used.

Open a Dos Box or Command Prompt box and change to the RMS300 directory, then type out **dir** and then press **Enter**.

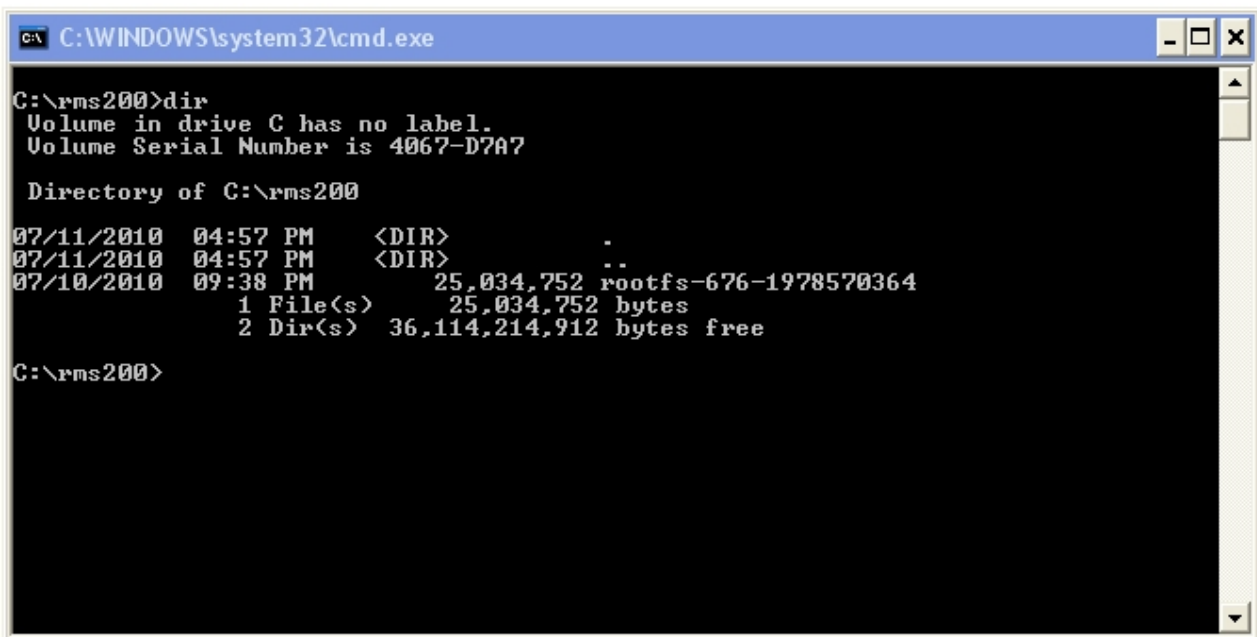

```
C:\WINDOWS\system32\cmd.exe


C:\rms200>dir
Volume in drive C has no label.
Volume Serial Number is 4067-D7A7

Directory of C:\rms200

07/11/2010  04:57 PM    <DIR>          .
07/11/2010  04:57 PM    <DIR>          ..
07/10/2010  09:38 PM             25,034,752  rootfs-676-1978570364
               1 File(s)              25,034,752 bytes
               2 Dir(s)  36,114,214,912 bytes free

C:\rms200>
```

Log into your **RMS-300** board with the ftp command. The example below uses the default **RMS-300** ip address 10.10.10.10.

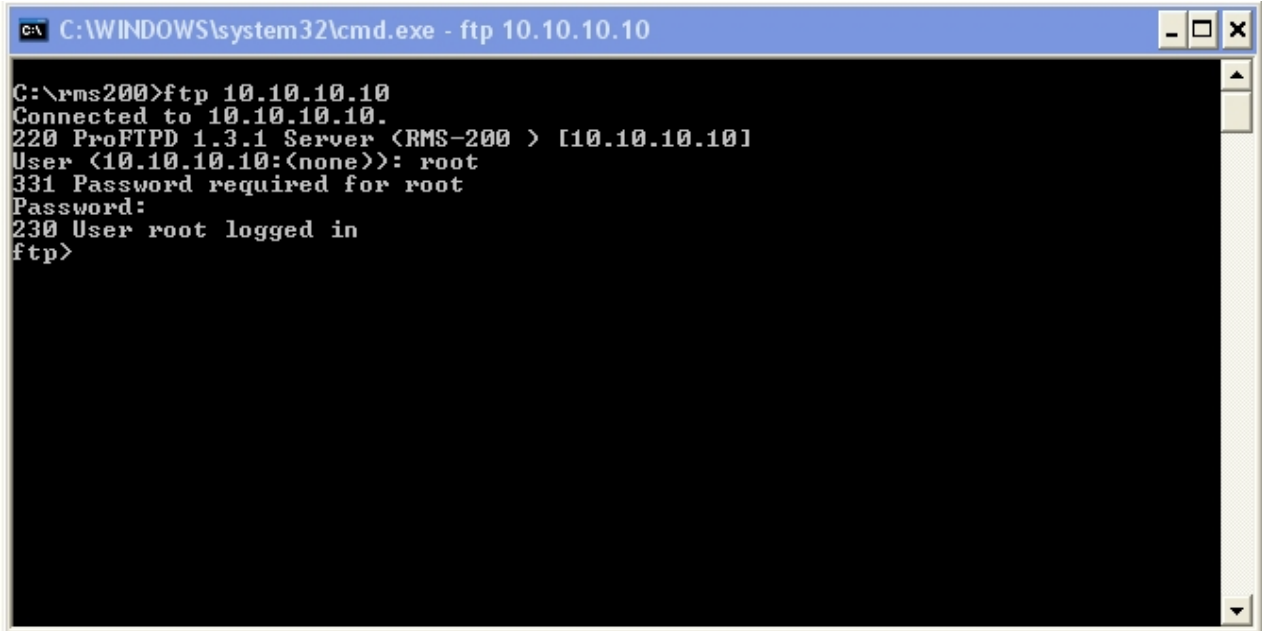


```

C:\WINDOWS\system32\cmd.exe - ftp 10.10.10.10

C:\rms200>ftp 10.10.10.10
Connected to 10.10.10.10.
220 ProFTPD 1.3.1 Server (RMS-200) [10.10.10.10]
User (10.10.10.10:(none)): root
331 Password required for root
Password:
230 User root logged in
ftp>
  
```

Once logged in, as shown below, type out **bin** and press **Enter**. Next type out **cd /data** and press **Enter**. Then type out **put rootfs-XXX-xxxxxxxxxx** (where XXX is the firmware build number, and xxxxxxxxxxxx is the checksum), and press **Enter**. The firmware will be uploaded to the RMS-300 board. When the upload is complete, type out **quit** and press **Enter**.

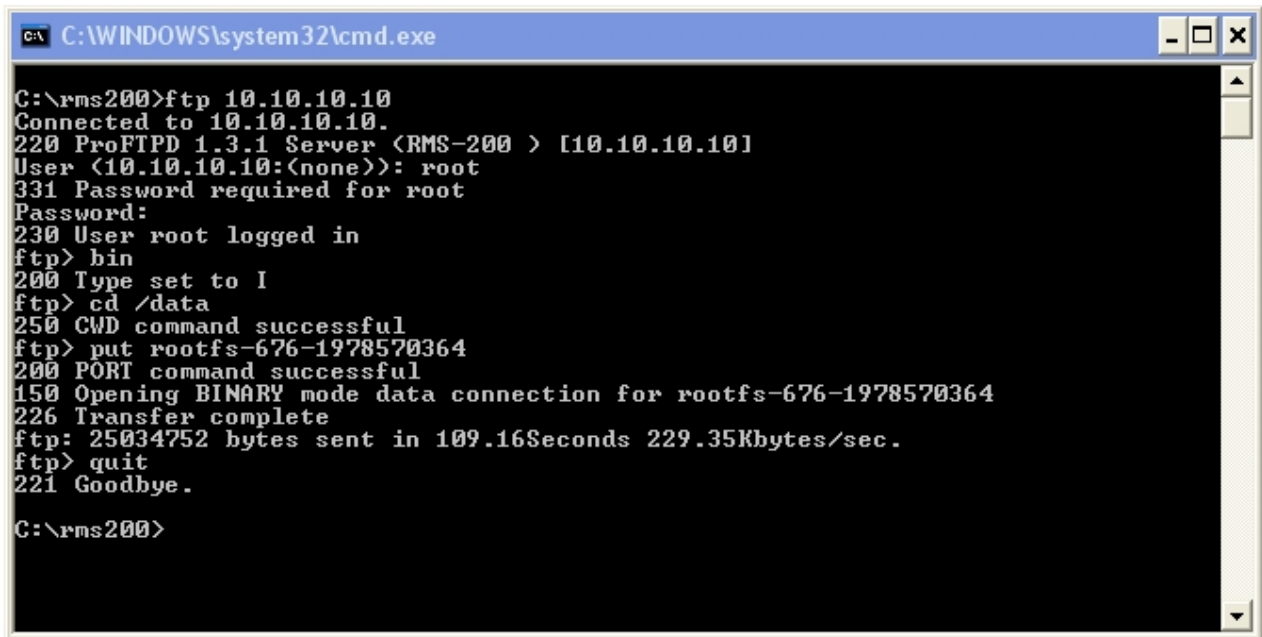

```


C:\WINDOWS\system32\cmd.exe

C:\rms200>ftp 10.10.10.10
Connected to 10.10.10.10.
220 ProFTPD 1.3.1 Server (RMS-200) [10.10.10.10]
User (10.10.10.10:(none)): root
331 Password required for root
Password:
230 User root logged in
ftp> bin
200 Type set to I
ftp> cd /data
250 CWD command successful
ftp> put rootfs-676-1978570364
200 PORT command successful
150 Opening BINARY mode data connection for rootfs-676-1978570364
226 Transfer complete
ftp: 25034752 bytes sent in 109.16Seconds 229.35Kbytes/sec.
ftp> quit
221 Goodbye.

C:\rms200>
  
```

## REMOTE MONITORING MADE EASY!

Open a Dos Box or Command Prompt box and telnet to the RMS200 board, then type out **rootfsupgrade rootfs-XXX-xxxxxxxxxx** (where XXX is the firmware build number, and xxxxxxxxxx is the checksum) and then press **Enter**. You should see similar output to what is shown below.

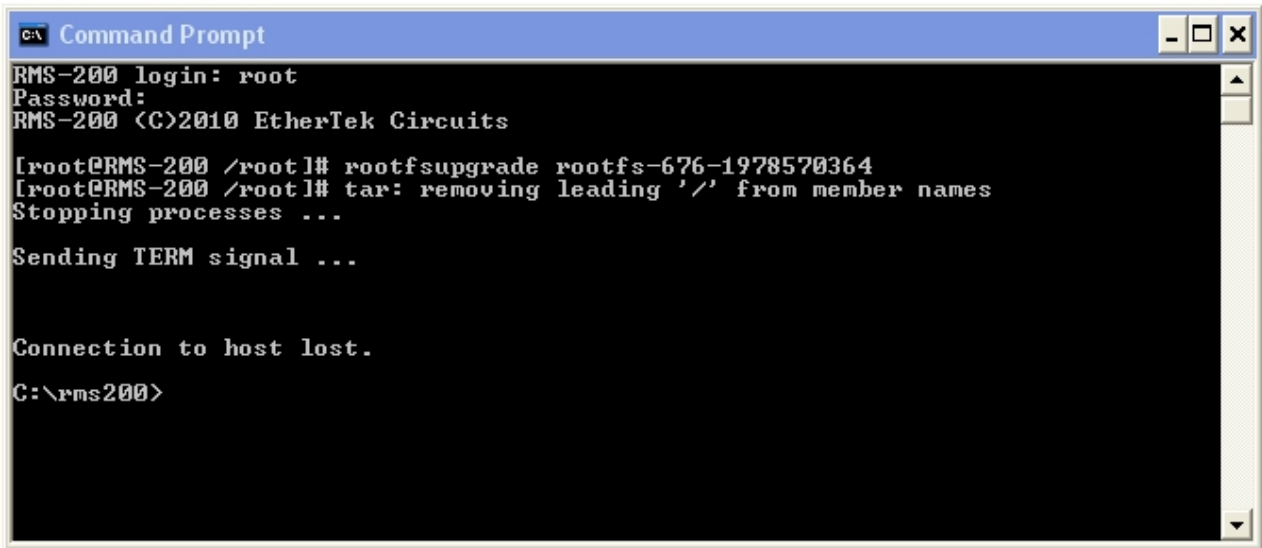

```
C:\> Command Prompt
RMS-200 login: root
Password:
RMS-200 (C)2010 EtherTek Circuits

[root@RMS-200 /root]# rootfsupgrade rootfs-676-1978570364
[root@RMS-200 /root]# tar: removing leading '/' from member names
Stopping processes ...

Sending TERM signal ...

Connection to host lost.
C:\rms200>
```

When the firmware programming is complete, the **RMS-300** board will reboot with the new firmware image. After 45 seconds you may reconnect to the **RMS-300** board and upload your data base, add scripts etc.



## Downloads

Please visit <http://www.remotemonitoringsystems.ca/rms300/rms-300-downloads.php> for current downloads such as SNMP mib file.

## Specs

### **Base System 4Mb Flash / 16 Mb Ram**


Power Consumption: 1.2 Watts

### **General Board Information**

Software Features		Hardware Features	
OS:	Linux	Size: Weight:	7.50 x 5.00 inches. 220 grams (7.76 oz.)
Kernel Version:	2.6.33	MIPS	500 Million Instructions /sec.
Services:	HTTP Server, FTP Server, FTP Client, SSH, SNMP Agent, TELNET Server PPP	Power:  Cpu:  Memory:	1.2 Watts (High Efficiency power supply) **(with no USB devices plugged in)  Arm AT91SAM9G20 32 bit, RISC, 400MHz  64MB of SD-RAM 256MB of FLASH
Drivers:	USB to Ethernet USB to Serial USB flash stick USB Web Cameras Relays LM75 Voltmeters & More	Ports:  Other:	1 Ethernet (10/100 Mb/s), 2 USB 2.0, One Wire. 5.0v Power Port (500ma), 3.3v Power Port (500ma)  1 Serial console, 1 full RS-232, 5 Alarm inputs, 6 GPIO, 3 multi purpose push buttons. Four 15A Latching Relays. 8 Isolated Voltmeters.
Programming Languages:	Bash, TCL, PHP, Perl, Python, Lua	Operating Temperature	Minimum -30 C Maximum +85 C




REMOTE MONITORING MADE EASY!

Block Diagram

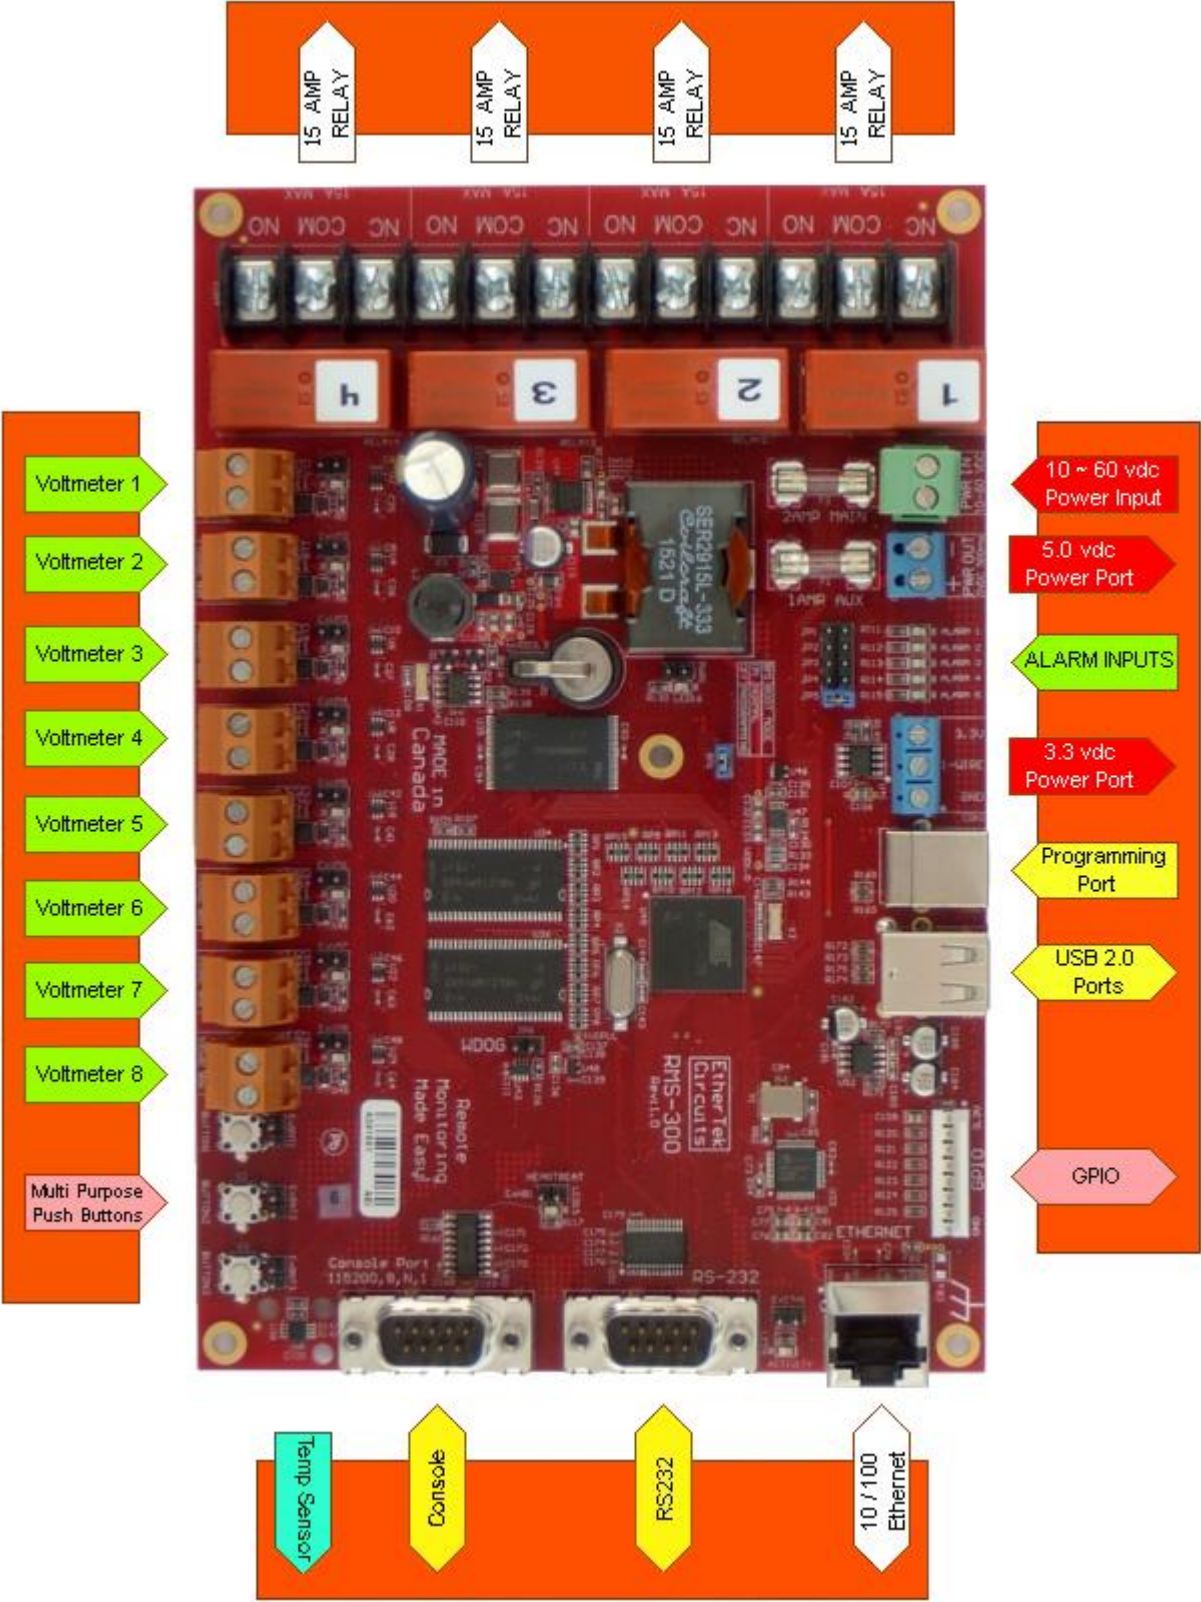

## Graphs

The graphs below were created by the RMS-300 board using RRD Tool. Graphs are available for each voltmeter, temperature, and system load.

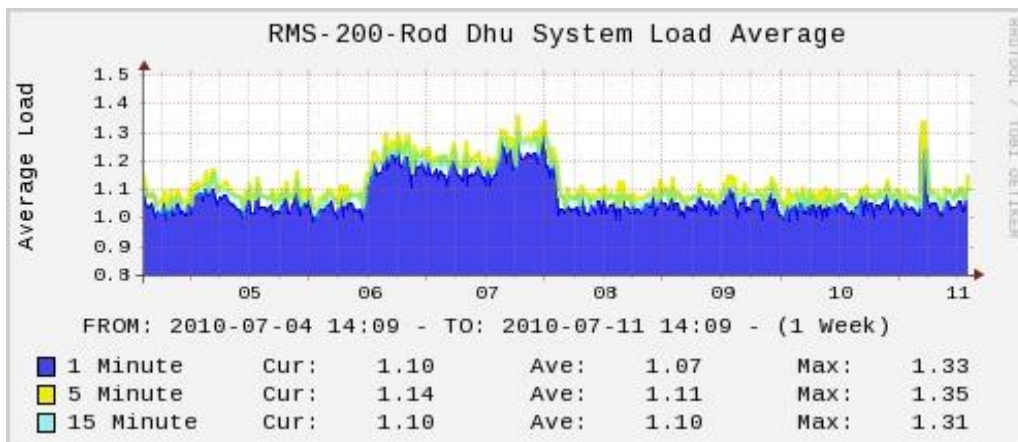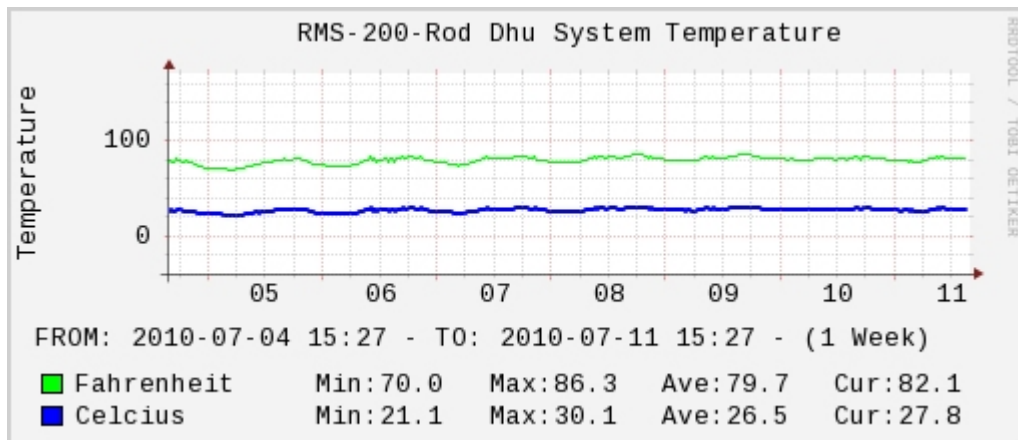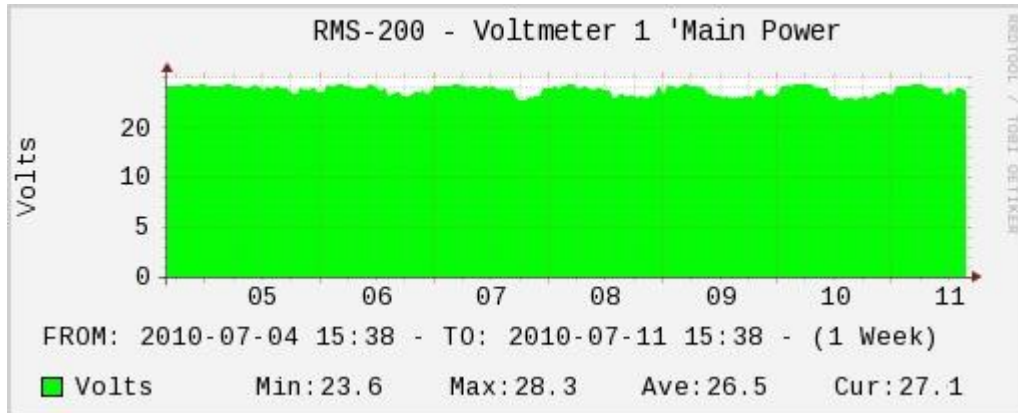

## Warranty

### **RMS-300 One (1) Year Limited Warranty**

#### **WARRANTY COVERAGE**

EtherTek Circuits warranty obligations are limited to the terms set forth below:

EtherTek Circuits warrants their hardware products against defects in materials and workmanship for a period of ONE (1) YEAR from the date of original retail purchase. If a defect exists, at its option EtherTek Circuits will (1) repair the product at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. A replacement product/part assumes the remaining warranty of the original product or ninety (90) days from the date of replacement or repair, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes EtherTek Circuits property. When a refund is given, your product becomes the property of EtherTek Circuits. Contact your RMS-300 retailer for warranty instructions.

#### **EXCLUSIONS AND LIMITATIONS**

Software distributed by EtherTek Circuits is not covered under this Limited Warranty. Recovery and reinstallation of application software and user data are not covered under this Limited Warranty. EtherTek Circuits and its Authorized Resellers are not liable for any damage to equipment, buildings and/or property by the use or misuse of our products. This warranty does not apply: (a) to damage caused by accident, abuse, misuse, misapplication; (b) to damage caused by service (including upgrades and expansions) performed by anyone who is not an EtherTek Circuits Authorized Service Provider; (c) to a product or a part that has been modified without the written permission of EtherTek Circuits.

The RMS-300 circuit boards are supplied as OEM-type equipment and not in retail form. It is imperative that the user/purchaser understands the correct installation, configuration and operation of this equipment. Operation and configuration information is available via the website and is updated regularly. We recommend reviewing the website materials before powering the boards. The manufacturer and distributor cannot be held responsible for improper installation and configuration of this equipment and/or any damage caused by its improper use.

Interfacing external components or equipment to the RMS-300 boards is not intended for the novice electronics hobbyist, medium to advanced knowledge of electronic circuit design is necessary. The manufacturer and distributor cannot be held responsible for improper interfacing of custom circuits or equipment that damages the RMS-300 circuit boards or other equipment or property.

THIS WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. EtherTek Circuits SPECIFICALLY DISCLAIMS ANY

**REMOTE MONITORING MADE EASY!**

AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

IF EtherTek Circuits CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.